


PARABODY®

GS4 GYM SYSTEM

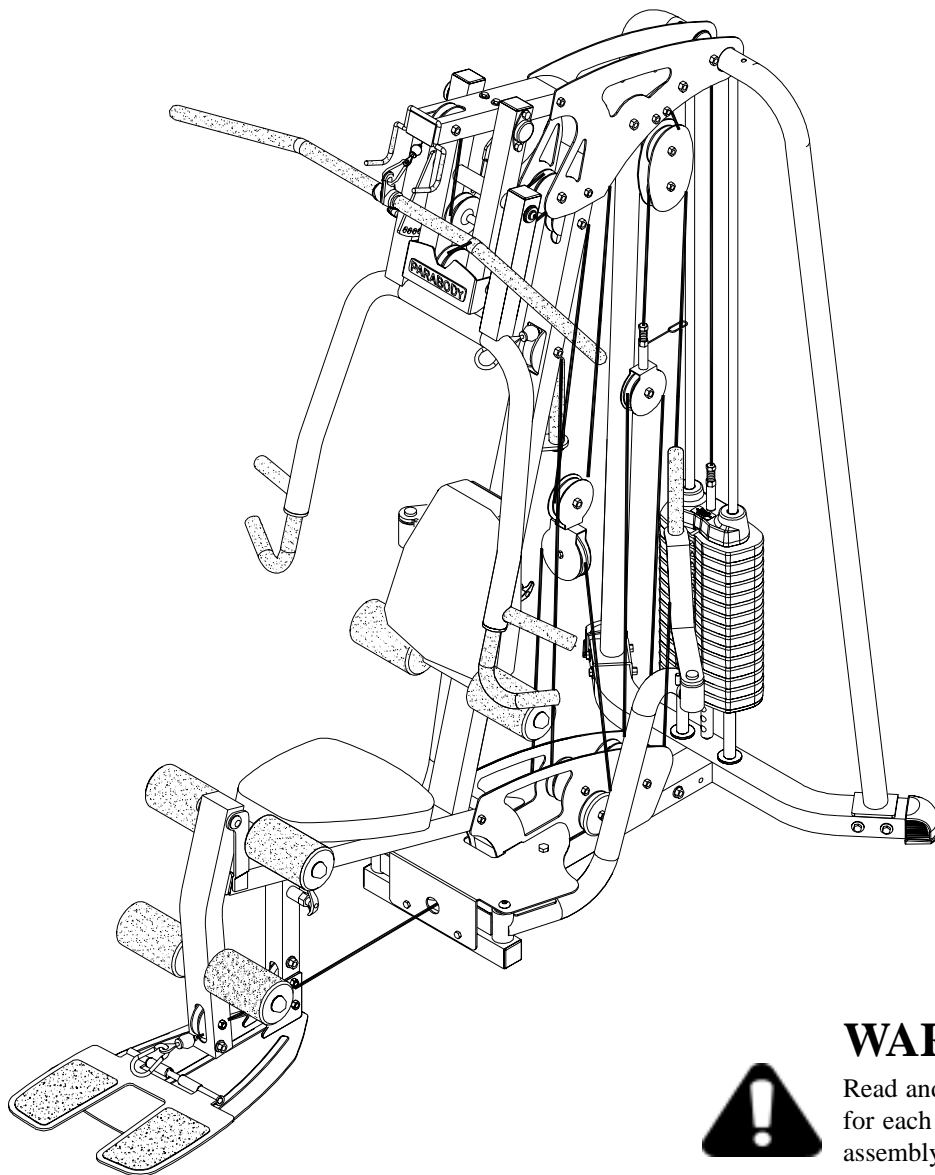

WARNING:

Read and follow all directions for each step to insure proper assembly of this product.



USER'S GUIDE

TABLE OF CONTENTS

Safety Statement.....	2	Assembly Instructions.....	5-24
General Notes.....	3	General Maintenance.....	25
Tools Required.....	3	Warranty Statement.....	26
Parts list.....	4	Product Services.....	27
		Insert-Registration Card	

IMPORTANT SAFETY INFORMATION



THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK FOLLOW THESE RULES!

1. Before using, read all the warnings and instructions on the use of this machine. Use only for intended exercise. **DO NOT** modify the machine.
2. Obtain a medical exam before beginning any exercise program.
3. Keep body and clothing free of all moving objects.
4. Inspect the machine before use. **DO NOT** use it if it appears damaged. **DO NOT** attempt to fix a broken or jammed machine. Notify your authorized ParaBody dealer before use and have repairs made by an authorized service technician.
5. Be certain that weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure, call your authorized ParaBody dealer.
6. Never pin the weights or prop plate into an elevated position. **DO NOT** use the machine if found in this condition. **DO NOT** attempt to fix. Notify your authorized ParaBody dealer.
7. Inspect cables and their connections before using machine. Pay particular attention to the cable ends. **DO NOT** attempt to fix. Notify your authorized ParaBody dealer before use and have repairs made by an authorized service technician.
8. Make sure all spring loaded pull pins are fully engaged in the adjustment position and fully tighten thumbscrew before use.
9. Children must not be allowed near this machine. Supervise teenagers.

NOTE: In a continual effort to improve our products, specifications are subject to change
© 2002 Life Fitness, a division of Brunswick Corporation. All rights reserved.
ParaBody is a trademark of Brunswick Corporation

www.parabody.com

IMPORTANT NOTES

Please note:


- * Thank you for purchasing the ParaBody GS4 Gym System. Please read these instructions thoroughly and keep them for future reference.
- * This product must be assembled on a flat, level surface to assure its proper function. DO NOT securely tighten any frame connections until the entire frame has been assembled, unless otherwise stated.

Tools Required for Assembly


- * Rubber mallet or hammer
- * 3/4" wrench
- * 9/16" wrench
- * Ratchet with 3/4" and 9/16" sockets
- * 5/32" Allen wrench
- * Adjustable wrench
- * Tape measure

Bolt Length Ruler

NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

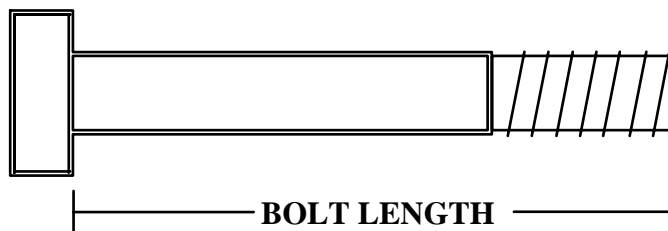

BOLT LENGTH RULER:

 

COMPONENTS PARTS LIST

KEY	PART #	DESCRIPTION	QTY
A	ACU04-1512	FRAME	1
B	ACU04-1511	BASE	1
C	ACU02-1492	BASE PLATE	2
D	ACU02-1489	BOOM PLATE LEFT	1
E	ACU02-1490	BOOM PLATE RIGHT	1
F	ACU04-1518	LEFT PEC FLY ARM	1
G	ACU04-1519	RIGHT PEC FLY ARM	1
H	ACU04-1517	PRESS ARM	1
I	ACU04-1520	PEC FLY HANDLE	2
J	ACU04-1515	SEAT ADJUST	1
K	ACU04-1157	LEG PEDESTAL	1
L	ACU04-1100	FOOT PLATE	1
M	ACU04-1513	LEFT REAR UPRIGHT	1
N	ACU04-1514	RIGHT REAR UPRIGHT	1
O	ACU04-1524	BRACE	1
P	ACU02-0055	"L" CABLE RETAINER	2
Q	ACU02-1451	3-1/2" PULLEY GUARD	2
R	ACU04-1171	SHORT "L" CABLE BRACE	2
S	ACU04-1342	LONG "L" CABLE BRACE	1
T	ACU01-1782	3/4 X 17" TUBE	1
U	ACU01-2009	3/4 X 17-1/2" TUBE	1
V	ACU01-2215	3/4 X 19-7/8" TUBE	1
W	ACU04-1523	BACK INCLINE ADJUST	1
X	ACU04-1516	PRESS ARM SUPPORT FRAME	1
Y	ACU02-1493	PRESS ARM ADJUSTMENT PLATE	1
Z	ACU04-1522	FLOATING PULLEY BRACKET	1
AA	ACU04-1527	DBL FLOATING PULLEY BRACKET	1
AB	ACU02-1071	FLOATING PULLEY PLATE	2
AC	ACU01-2216	GUIDE ROD	2
AD	ACU04-1165	WEIGHT STACK SPACER	2
AE	ACU06-0047	WEIGHT STACK CUSHION	2
AF	ACU10-0204ASY	HEAD PLATE ASSEMBLY	1
AG	ACU04-1386	LAT BAR	1
AH	ACU04-0622	LOW ROW BAR	1
AI	ACU07-0135	SEAT/BACK PAD	2
AJ	ACU6194601	4 X 7" ROLLER PAD	6
AK	ACU12-0005	AB STRAP	1
AL	ACU12-0041	ANKLE STRAP	1
AM	ACU13-0145	LAT CABLE 199-3/4"	1
AN	ACU13-0146	LOW CA-BLE 168"	1
AO	ACU13-0147	GUIDE CABLE 96"	1
AP	ACU13-0148	PEC FLY CABLE 90-1/2"	1
AQ	ACU7308601	WEIGHT STACK LABEL	1

HARDWARE PARTS LIST

KEY	PART #	DESCRIPTION	QTY
1	ACUDA1E01253413NB	1/2 X 5-3/4" BOLT	1
2	ACUDA1C01210413NB	1/2 X 104mm BOLT	1
3	ACUDA1E03880016NB	3/8 X 8" BOLT	2
4	ACUDA1E03853416NB	3/8 X 5-3/4" BOLT	1
5	ACUDA1E03840016NB	3/8 X 4" BOLT	1
6	ACUDA1E03833416NB	3/8 X 3-3/4" BOLT	25
7	ACUDA1E03831416NB	3/8 X 3-1/4" BOLT	2
8	ACUDA1E03830016NB	3/8 X 3" BOLT	2
9	ACUDA1E03823416NB	3/8 X 2-3/4" BOLT	3
10	ACUDA1E03820016NB	3/8 X 2" BOLT	2
11	ACUDA1E03813416NB	3/8 X 1-3/4" BOLT	5
12	ACUDA1E03811416NB	3/8 X 1-1/4" BOLT	2
13	ACU05-0311	SHIM WASHER	2
14	ACUDA1E03803416YB	3/8 X 3/4" BOLT	2
15	ACUDAE01203413YB	1/2 X 3/4" BTN HEAD	4
16	ACUDACE03810016YB	3/8 X 1" FLAT HEAD	2
17	ACUDC1340130030B	1/2" FLAT WASHER	2
18	ACUDC1250100020B	3/8" FLAT WASHER	19
19	ACUDB2E03811000B	3/8" LOCK NUT	41
20	ACUDB2E01208000B	1/2" LOCK NUT	2
21	ACU05-0193	CHAIN	1
22	ACUDH1080080U	SNAP LINK	4
23	ACU05-0379	CABLE WIRE GUIDE	1
24	ACU05-0381	15/16" SPACER	11
25	ACU05-0382	1-1/4" SPACER	4
26	ACU08-0066	1-1/16" STEP SPACER	6
27	ACU08-0074	25/32" STEP SPACER	2
28	ACU08-0085	19/32" STEP SPACER	2
29	ACU05-0212	SHAFT COLLAR	2
30	ACU05-0036	STAR LOCK COLLAR	6
31	ACU06-0194	3/8" STAR KNOB	1
32	ACU06-0357	RH CAP	2
33	ACU06-0363	3/4" PLASTIC WASHER	4
34	ACU06-0375	PLASTIC SLEEVE	2
35	ACU06-0024	3-1/2" PULLEY	20
36	ACU06-0025	4-1/2" PULLEY	2
37	ACU06-0360	V PULLEY	1

NOTE: SOME OF THE PARTS LISTED MAY BE PRE-INSTALLED

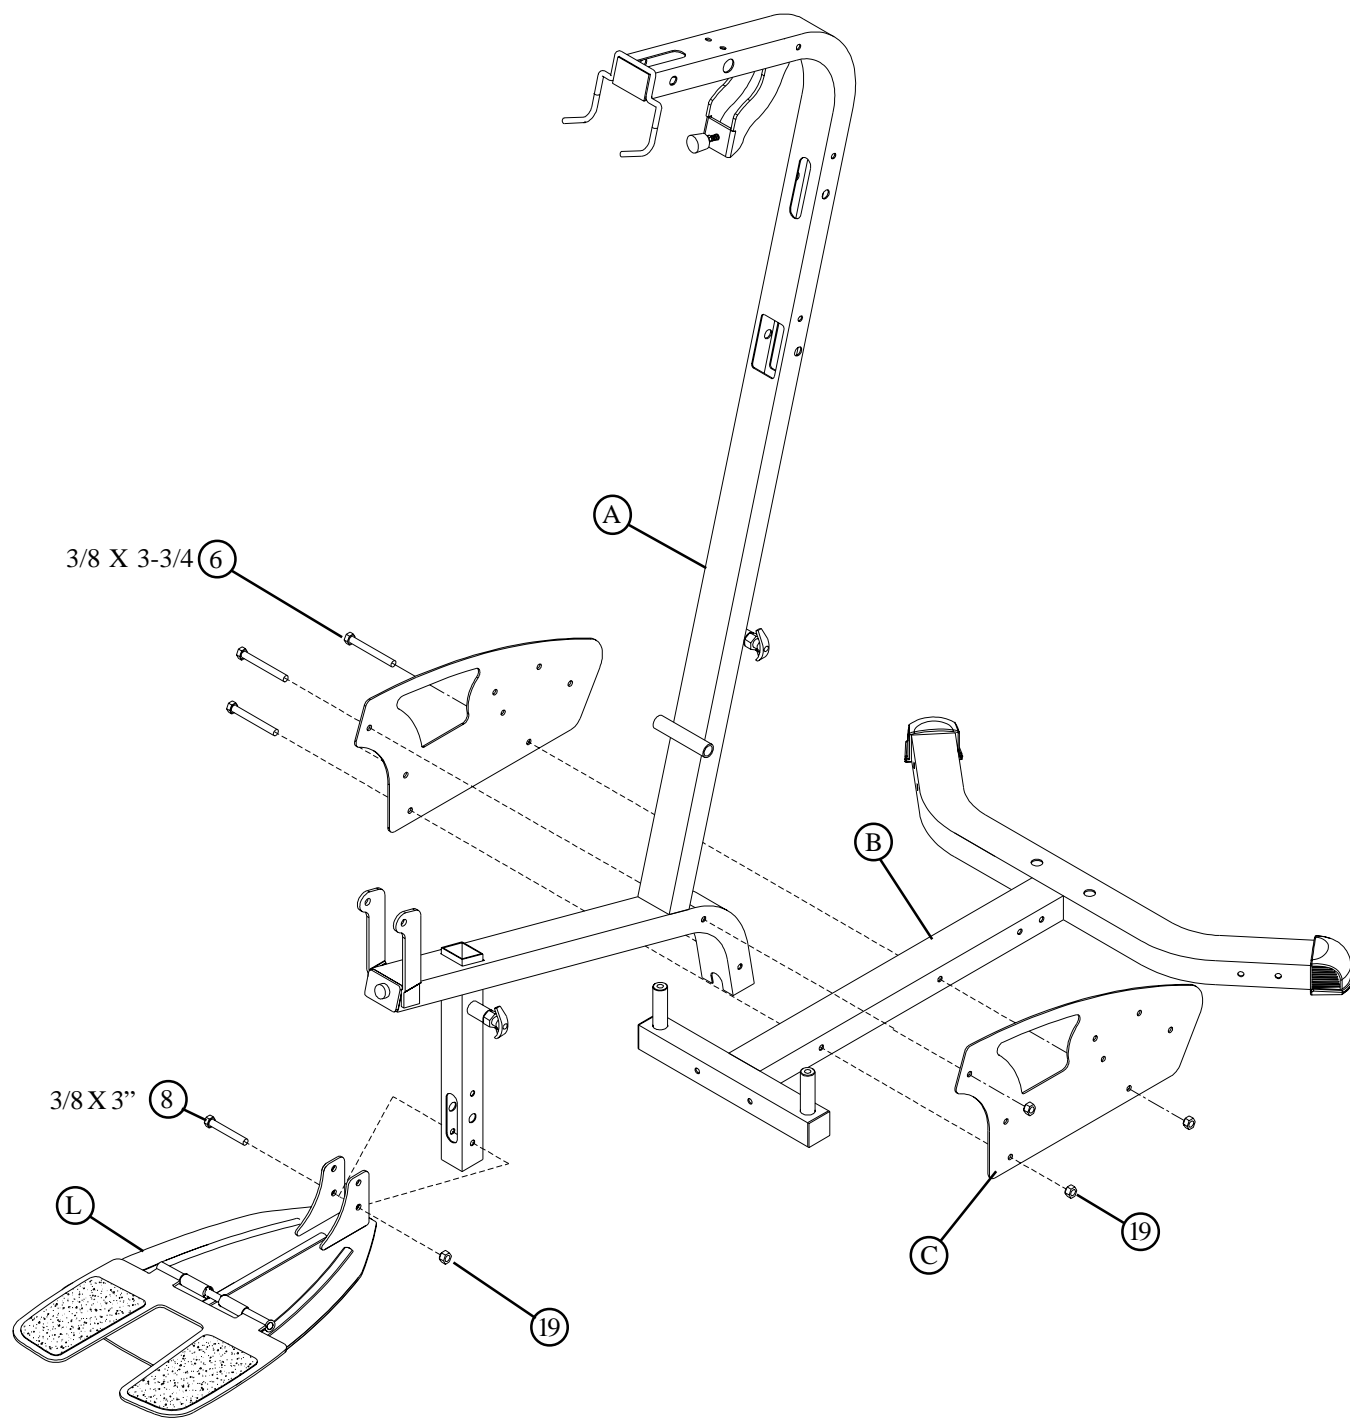


FIGURE 1

STEP 1:

- **LOOSELY** assemble two BASE PLATES (C) to the FRAME (A) and BASE (B) using three 3/8 X 3-3/4" BOLTS (6) and four 3/8" LOCKNUTS (19). See FIGURE 1.
- **LOOSELY** assemble the FOOTPLATE (L) to the lower holes in the FRAME (A) using one 3/8 X 3" BOLT (8) and one 3/8" LOCKNUT (19) as shown in FIGURE 1.

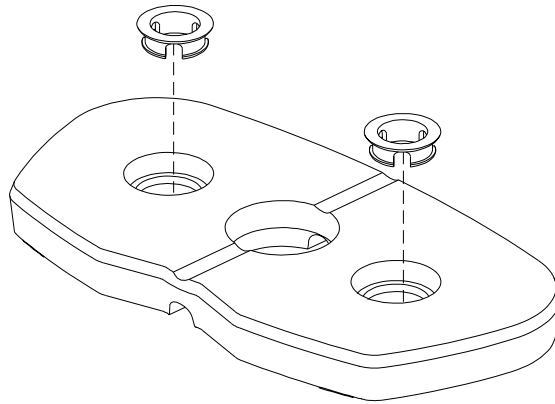


FIGURE 2

- CHECK THAT THE HEADPLATE AND WEIGHT PLATES ARE ASSEMBLED AS SHOWN IN FIGURES 2 & 3

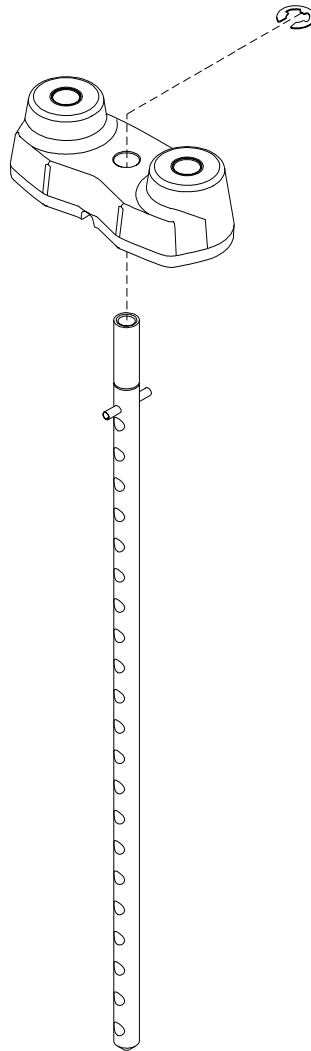


FIGURE 3


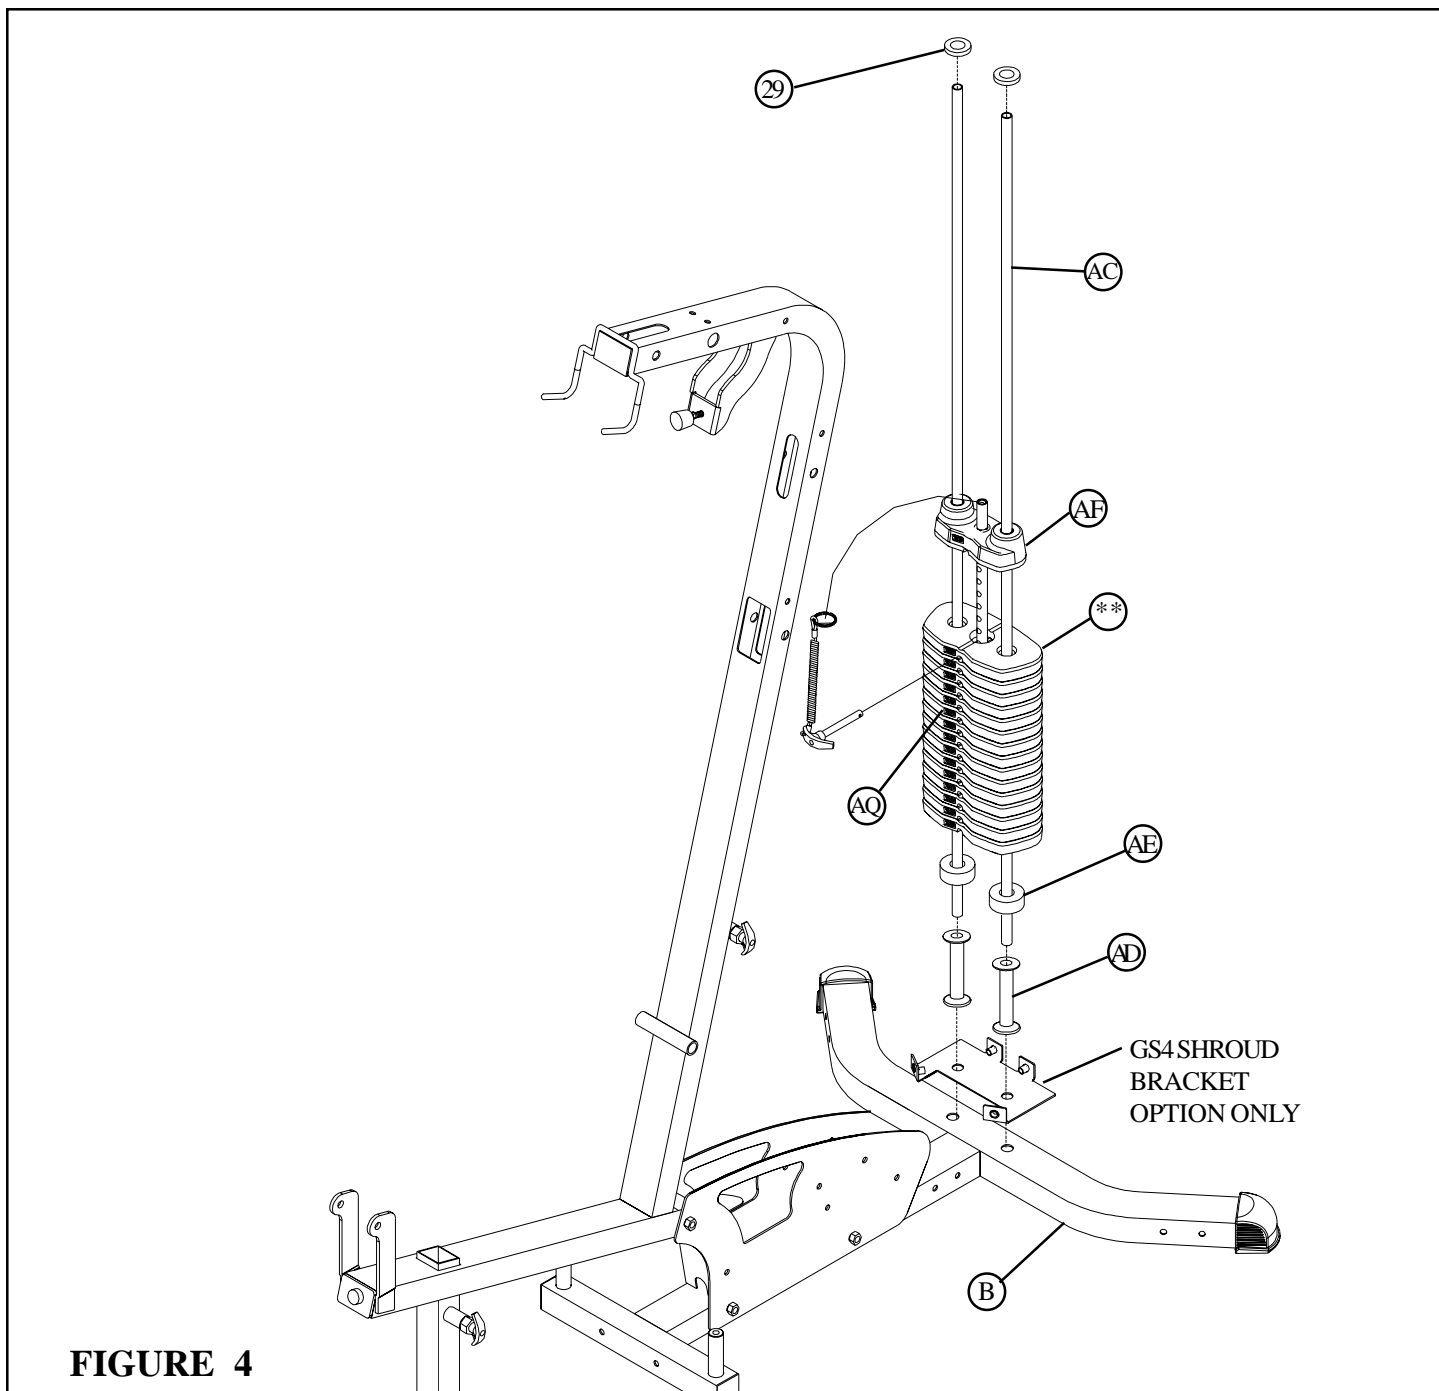


FIGURE 4


STEP 4:

- Insert two GUIDE RODS (AC) into the BASE FRAME (B) as shown on FIGURE 4. (NOTE: If the GS4 SHROUD OPTION was purchased, place the GUIDE RODS (AC) through the BOTTOM SHROUD BRACKET (found in SHROUD OPTION box) and into the BASE FRAME (B) as shown in FIGURE 4.
- (NOTE: Lubricate GUIDE RODS (AC) with silicon or teflon spray available at most hardware stores.)
- Slide two WEIGHT STACK SPACERS (AD) and two WEIGHT STACK CUSHIONS (AE) down over the GUIDE RODS (AC).
- Using **EXTREME CARE** slide all fifteen WEIGHT PLATES (**) down over the GUIDE RODS (AC) on to the WEIGHT STACK CUSHIONS (AE). Make sure that the WEIGHT PLATES (**) are all facing as shown.
- Slide the head plate assembly down over the GUIDE RODS (AC) onto the weight stack.
- Slide two SHAFT COLLARS (29) over the GUIDE RODS (AC) as shown in FIGURE 4.
- Apply WEIGHT STACK LABELS (AQ) to WEIGHT PLATES (**) and HEAD PLATE (AF) as shown in FIGURE 4. Begin with number one at the HEAD PLATE (AF) with larger numbers in consecutive order towards bottom of weight stack.

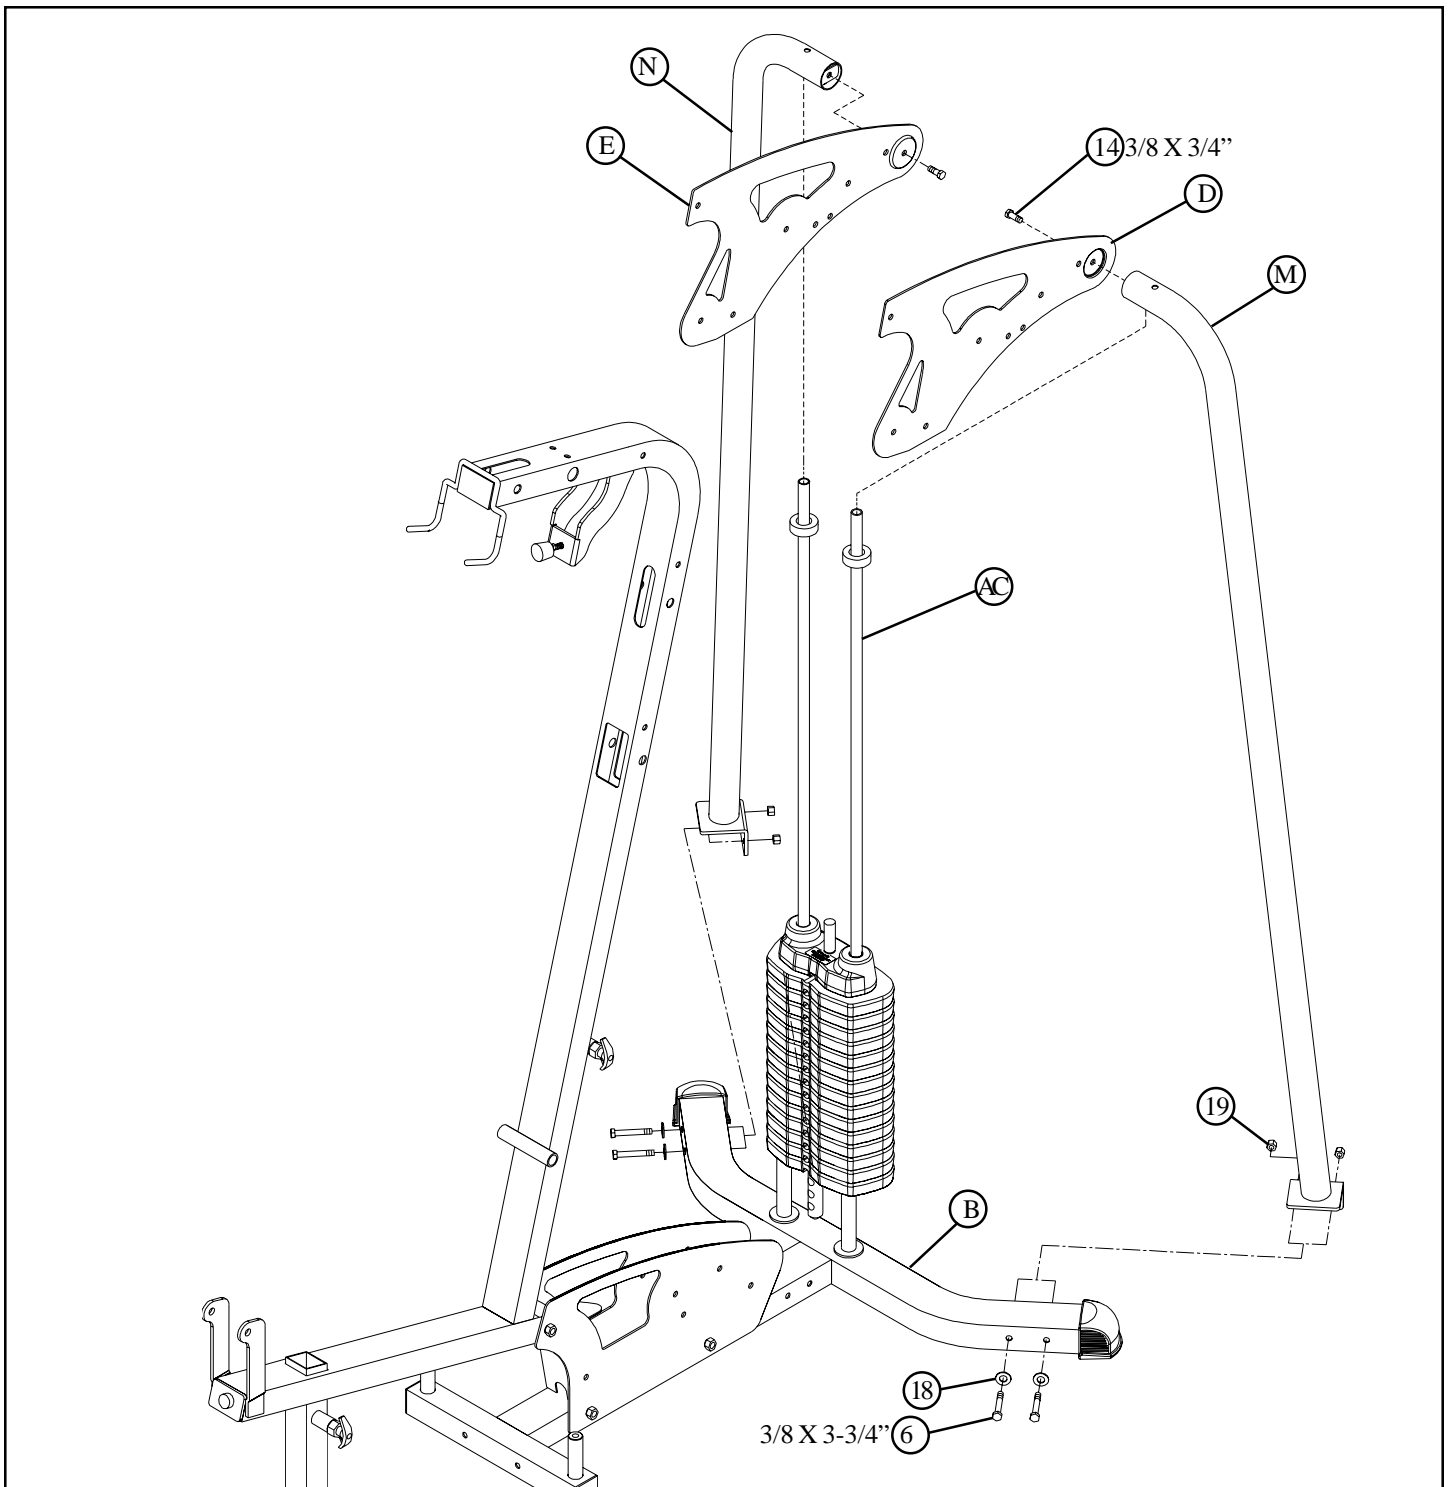

STEP 5:

- Carefully slide the RIGHT (N) and LEFT (M) REAR UPRIGHTS over the GUIDE RODS (AC) as shown in FIGURE 5 and **SECURELY** assemble the RIGHT (N) and LEFT (M) REAR UPRIGHTS to the BASE (B) using four 3/8 X 3-3/4" BOLTS (6), four 3/8" WASHERS (18) and two 3/8" LOCK NUTS (19) as shown in FIGURE 5.
- **SECURELY** assemble the RIGHT (E) and LEFT (D) BOOM PLATES to the RIGHT (N) and LEFT (M) REAR UPRIGHTS using two 3/8 X 3/4" BOLTS W/LOCKTITE (14) as shown in FIGURE 5.

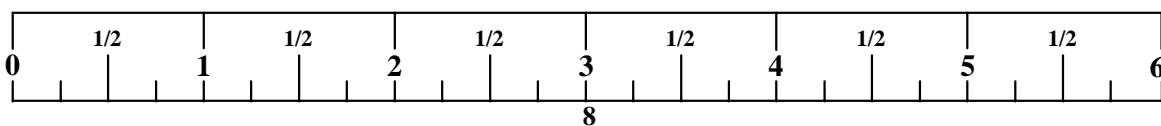


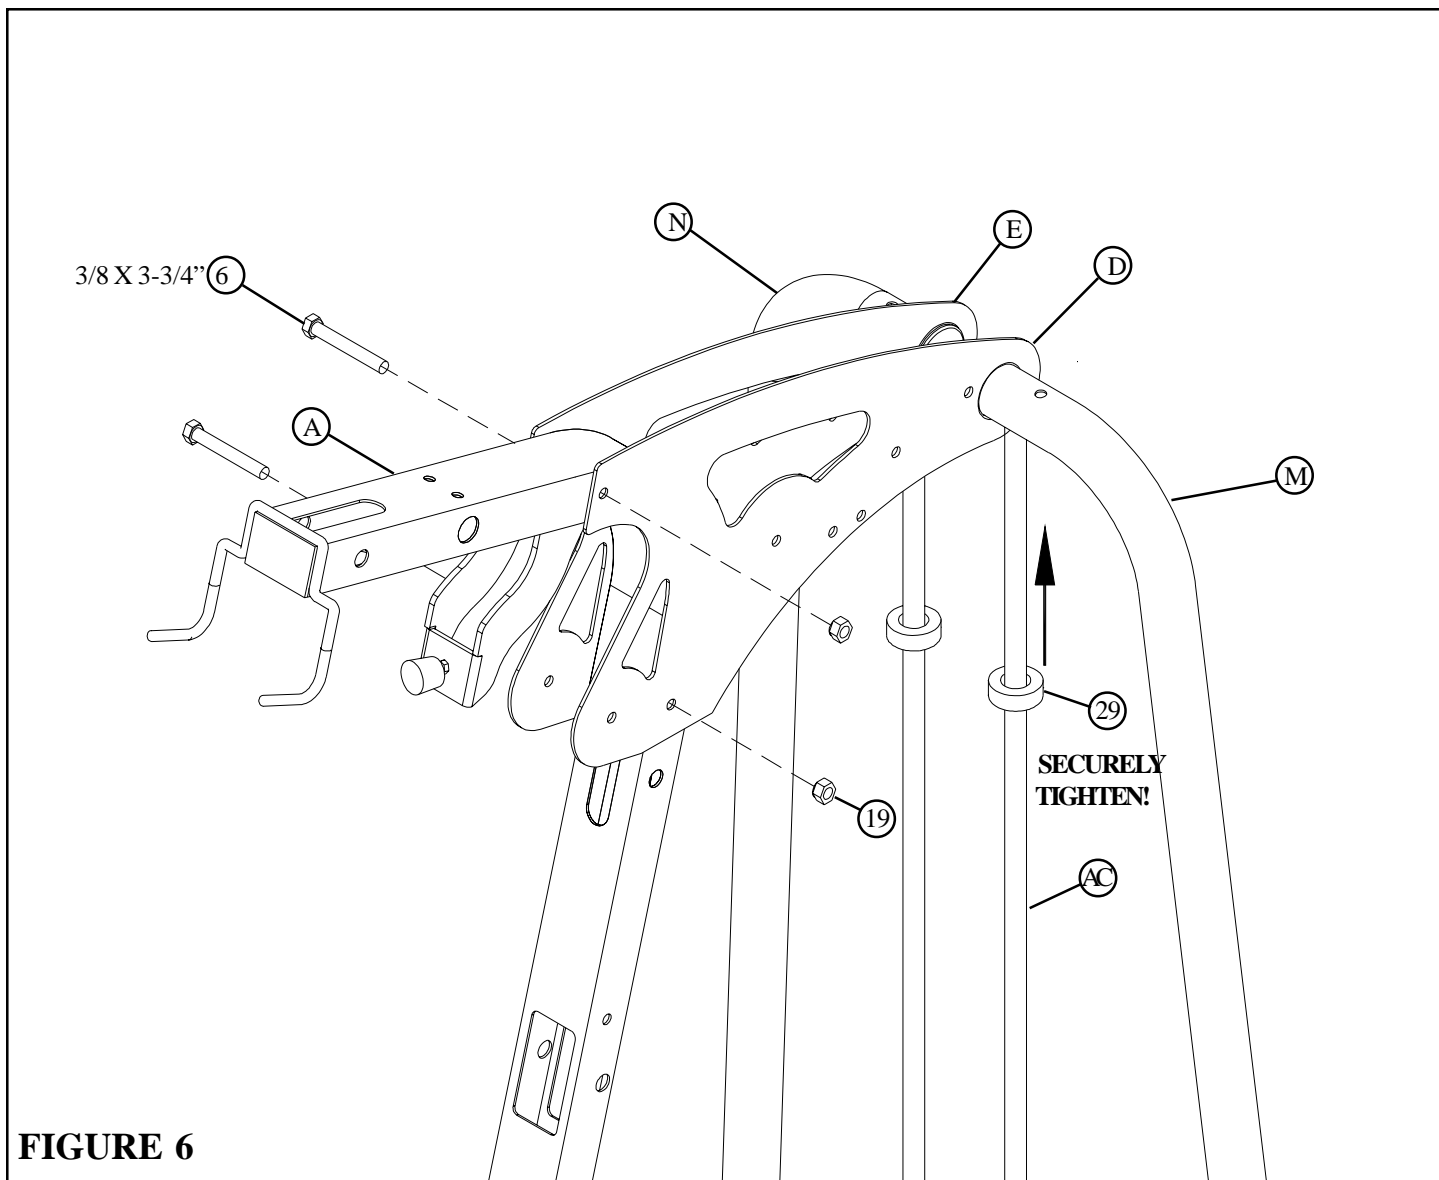


FIGURE 6

STEP 6:


- **SECURELY** assemble the LEFT (D) and RIGHT (E) BOOM PLATES to the FRAME (A) using two 3/8 X 3-3/4" BOLTS (6) and two 3/8" LOCK NUTS (19). See FIGURE 6.
- **SECURELY TIGHTEN** top of both SHAFT COLLARS (29) flush to bottom of the guide rod bushings in both the LEFT (M) and RIGHT (N) REAR UPRIGHTS as shown in FIGURE 6.

FIGURE 7

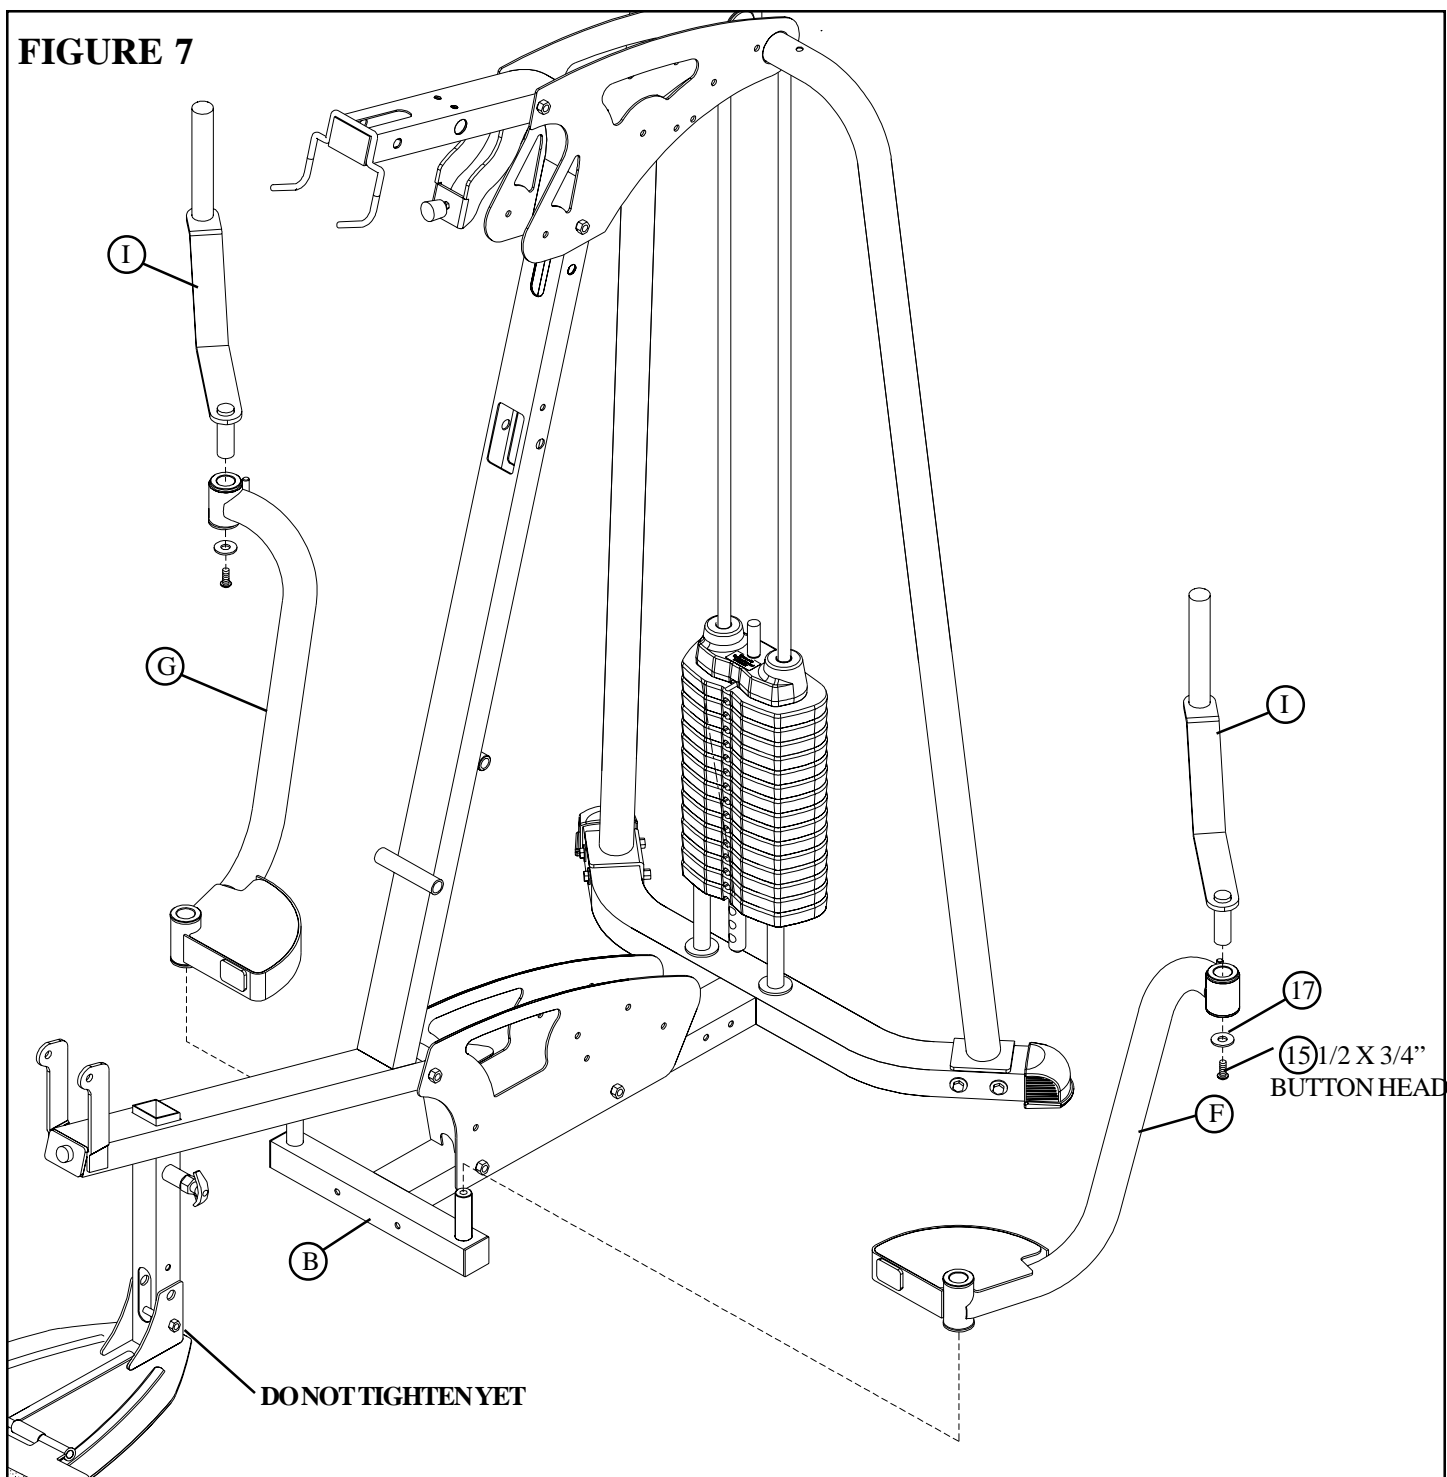

STEP 7:

- Securely tighten all frame connections except the FOOTPLATE/FRAME connection as noted in FIGURE 7.
- Slide the LEFT (F) and RIGHT (G) PEC FLY ARMS over the BASE (B) as shown in FIGURE 7.
- **SECURELY** assemble the PEC FLY HANDLES (I) to the LEFT (F) and RIGHT (G) PEC FLY ARMS using two 1/2 X 3/4" BUTTON HEAD BOLTS (15), and two 1/2" WASHERS (17) as shown in FIGURE 7.

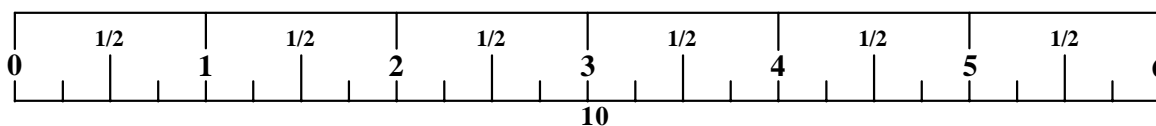

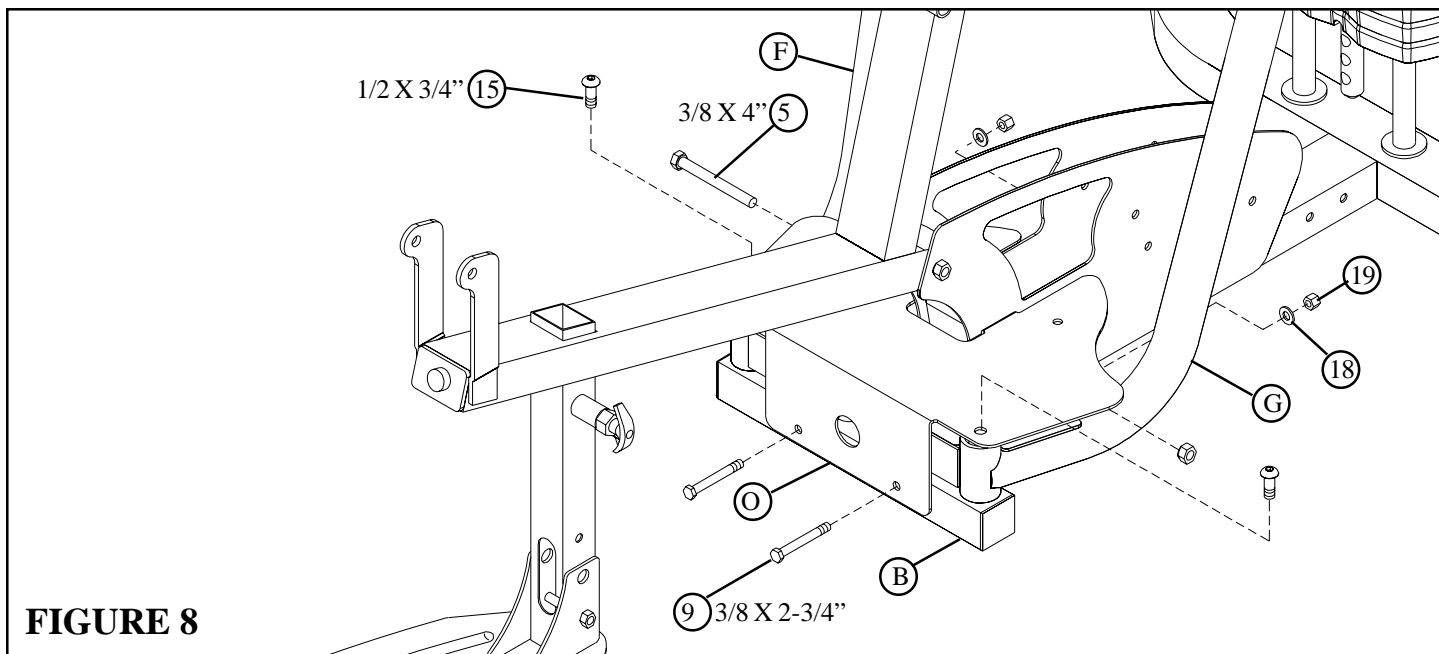


FIGURE 8

STEP 8:

- **SECURELY** assemble the PEC PLATE (O) to the BASE (B) using two 3/8 X 2-3/4\"
- **SECURELY** assemble the LEFT (F) and RIGHT (G) PEC FLY ARMS to BASE (B) using two 1/2 X 3/4\"

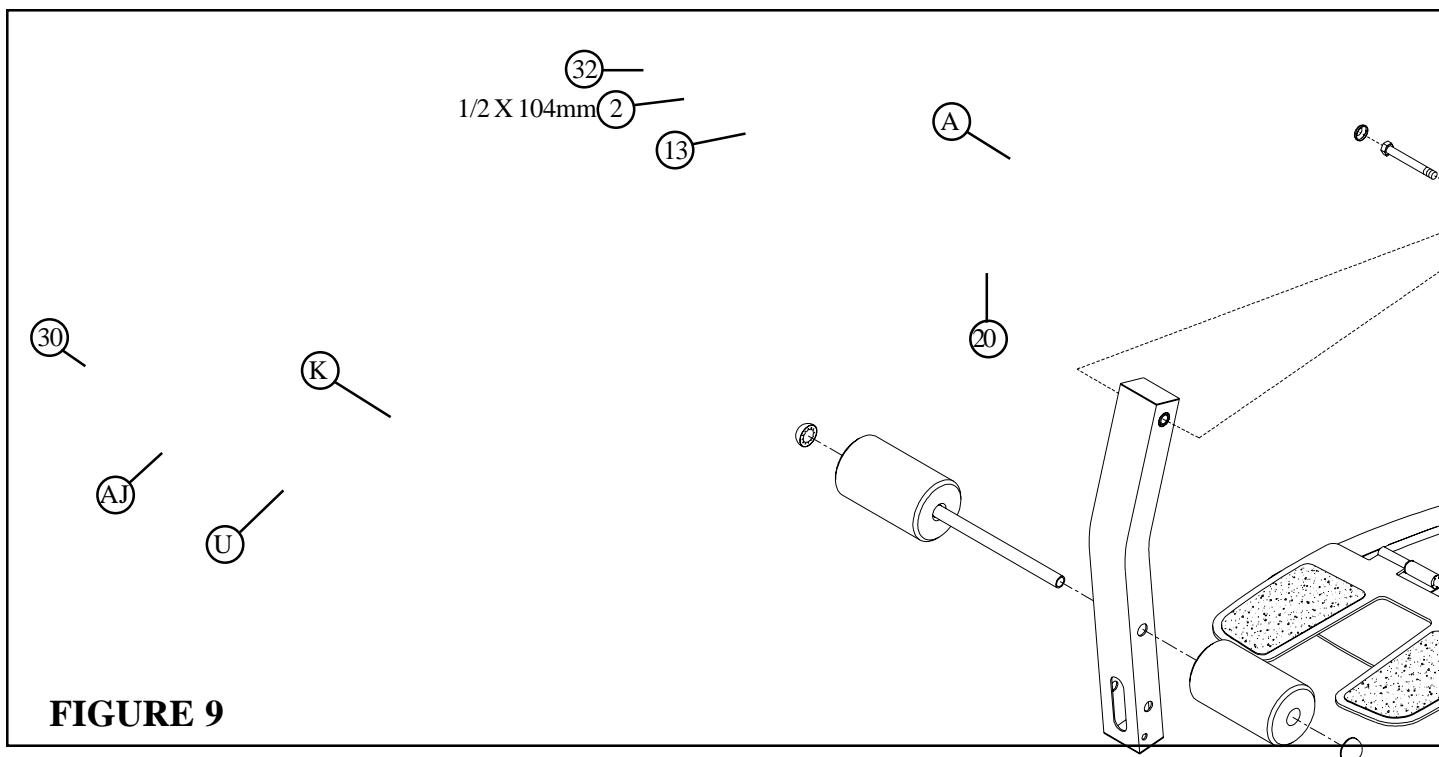


FIGURE 9

STEP 9:

- Assemble the LEG PEDESTAL (K) to the FRAME (A) using two RH CAPS (32), one 1/2 X 104mm BOLT (2), two 1/2\"
- Assemble two ROLLER PADS (AJ) to the LEG PEDESTAL (K) using one 3/4 X 17-1/2\"

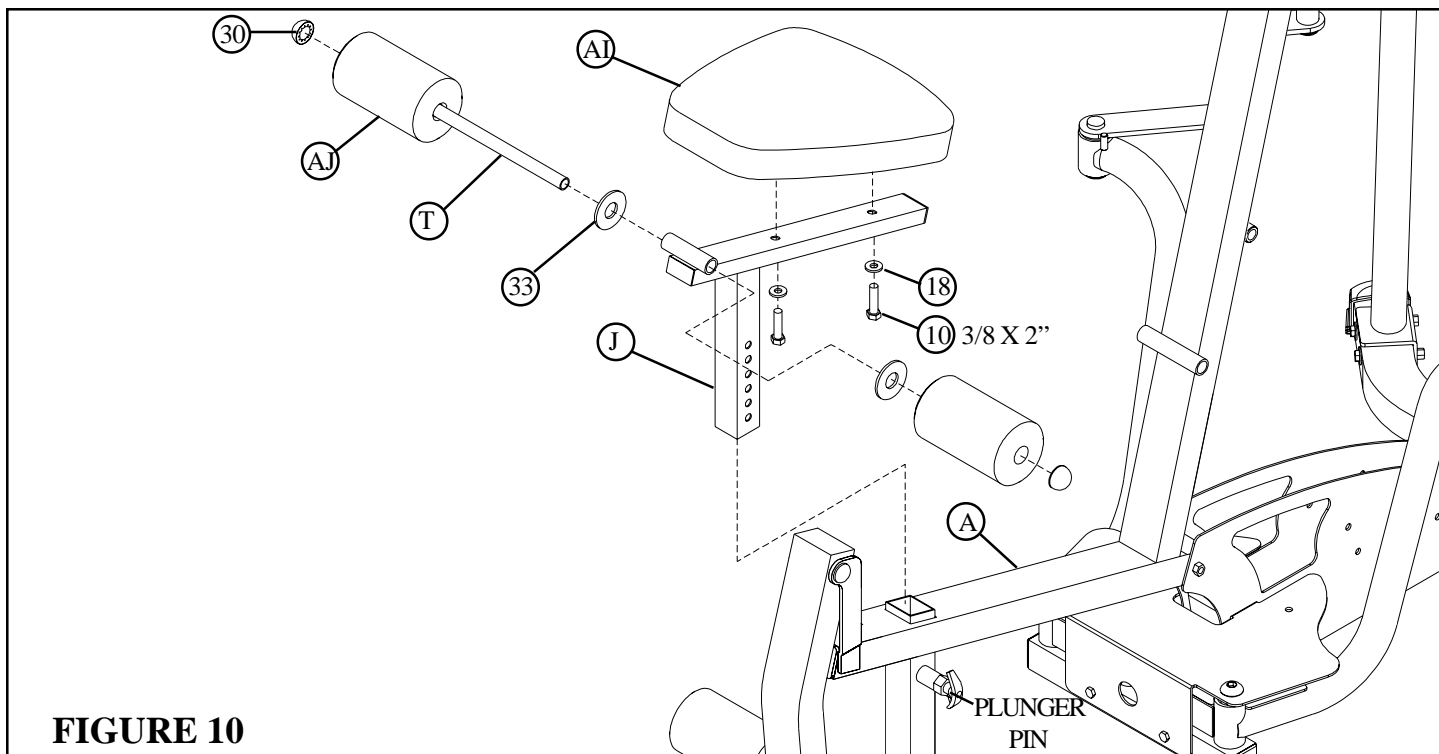


FIGURE 10

STEP 10:

- **SECURELY** assemble one SEAT/BACK PAD (AI) to the SEAT ADJUST (J) using two 3/8 X 2" BOLTS (10) and two 3/8" WASHERS (18).
- Assemble two ROLLER PADS (AJ) to the SEAT ADJUST (J) using one 3/4 X 17" TUBE (T), two PLASTIC WASHERS (33) and two STARLOCK COLLARS (30) as shown in FIGURE 10.
- **CAREFULLY** insert the SEAT ADJUST ASSEMBLY into the FRAME (A) as shown. The SEAT height can be adjusted using the PLUNGER PIN.

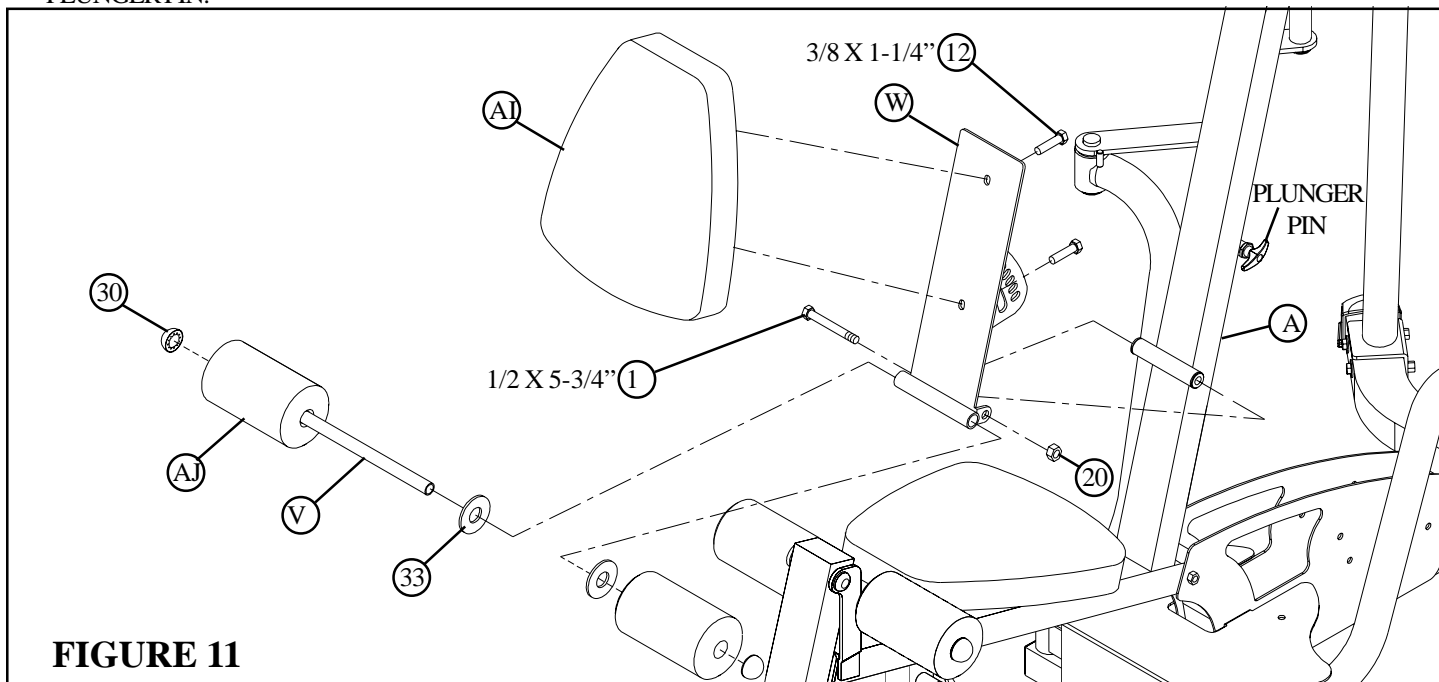


FIGURE 11

STEP 11:

- **SECURELY** assemble one SEAT/BACK PAD (AI) to the BACK INCLINE ADJUST (W) using two 3/8 X 1-1/4" BOLTS (12).
- **SECURELY** assemble the BACK INCLINE ADJUST (W) to the FRAME (A) using one 1/2 X 5-3/4" BOLT (1) and one 1/2" LOCK NUT (20). The BACK PAD angle can be adjusted using the PLUNGER. (**Note: Tighten this connection enough to remove excess play yet allow the BACK INCLINE ADJUST to rotate freely.**)
- Assemble two ROLLER PADS (AJ) to the BACK INCLINE ADJUST (W) using one 3/4 X 19-7/8" TUBE (V), two PLASTIC WASHERS (33) and two STARLOCK COLLARS (30) as shown in FIGURE 11.

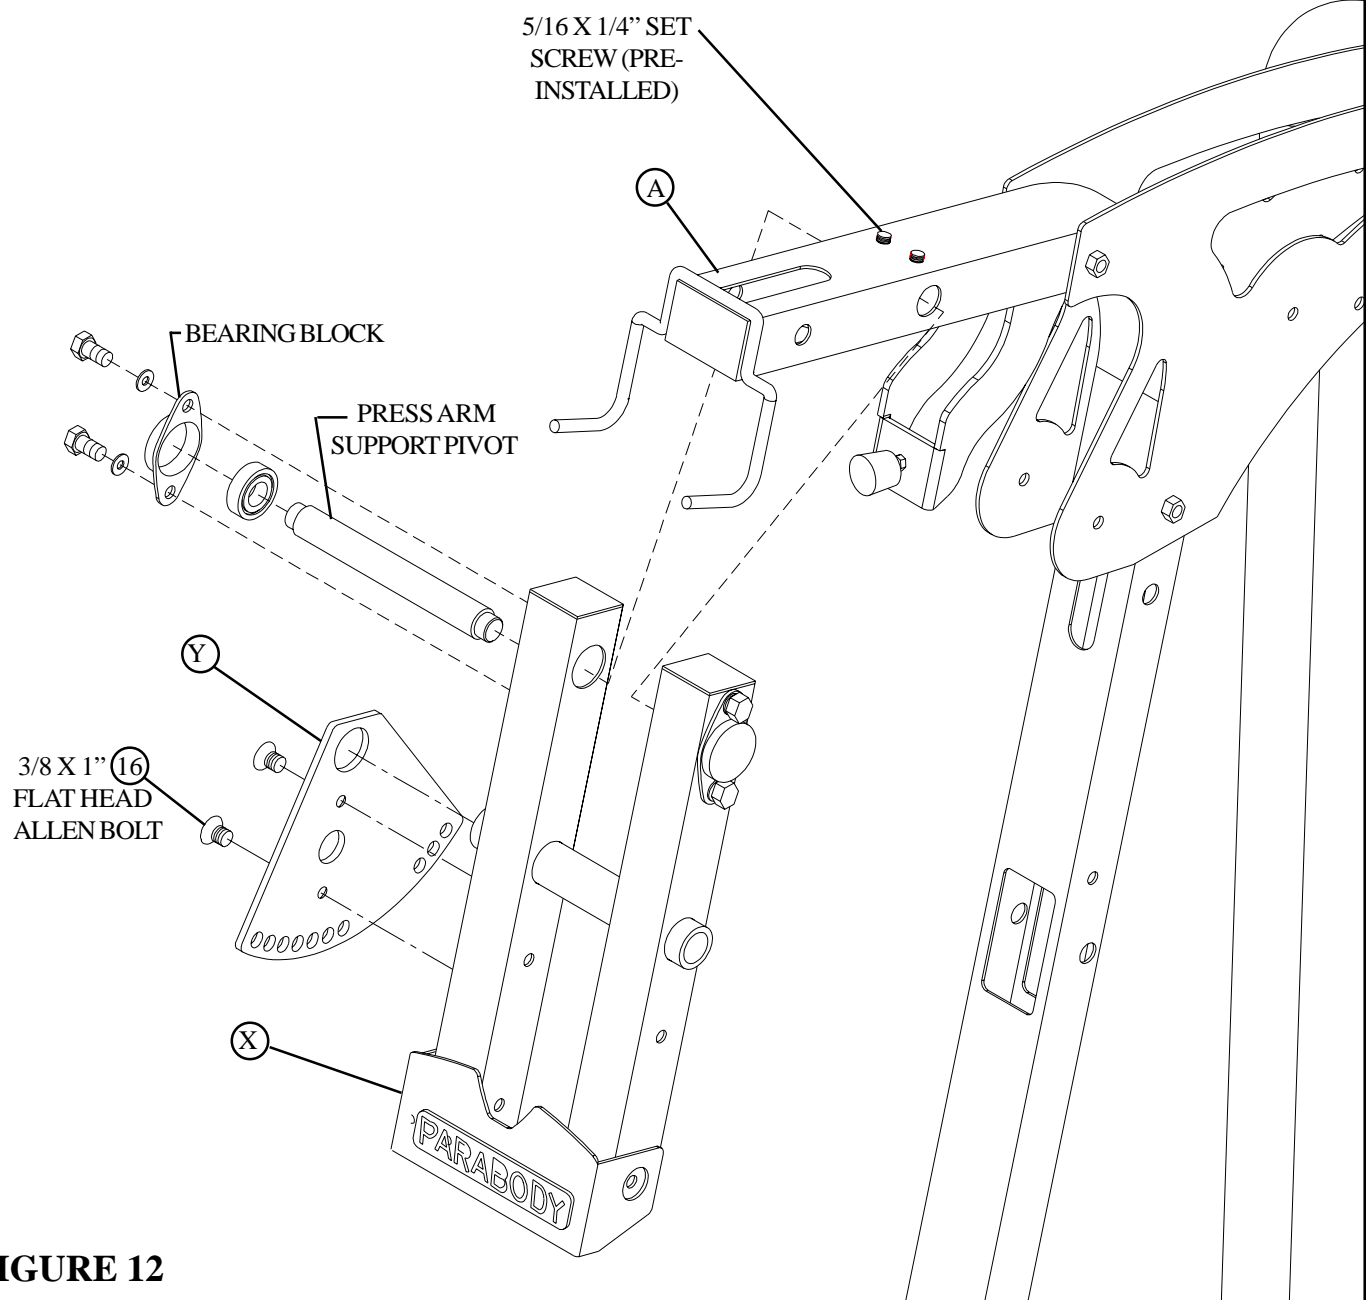



FIGURE 12

STEP 12:

- Disassemble one of the BEARING BLOCKS from the PRESS ARM SUPPORT FRAME (X) and remove the PRESS ARM SUPPORT PIVOT as shown in FIGURE 12.
- Insert the PRESS ARM SUPPORT PIVOT thru the PRESS ARM SUPPORT FRAME (X) and the FRAME (A). Assemble the BEARING BLOCKS to the PRESS ARM SUPPORT FRAME (X) as shown in FIGURE 12.
- **SECURELY** tighten the two 5/16 X 1/4" SET SCREWS (PRE-INSTALLED) on the FRAME (A) as shown in FIGURE 12.
- **SECURELY** assemble the PRESS ARM ADJUSTMENT PLATE (Y) to the PRESS ARM SUPPORT FRAME (X) using two 3/8 X 1" FLAT HEAD ALLEN BOLTS (16) as shown in FIGURE 12.

 

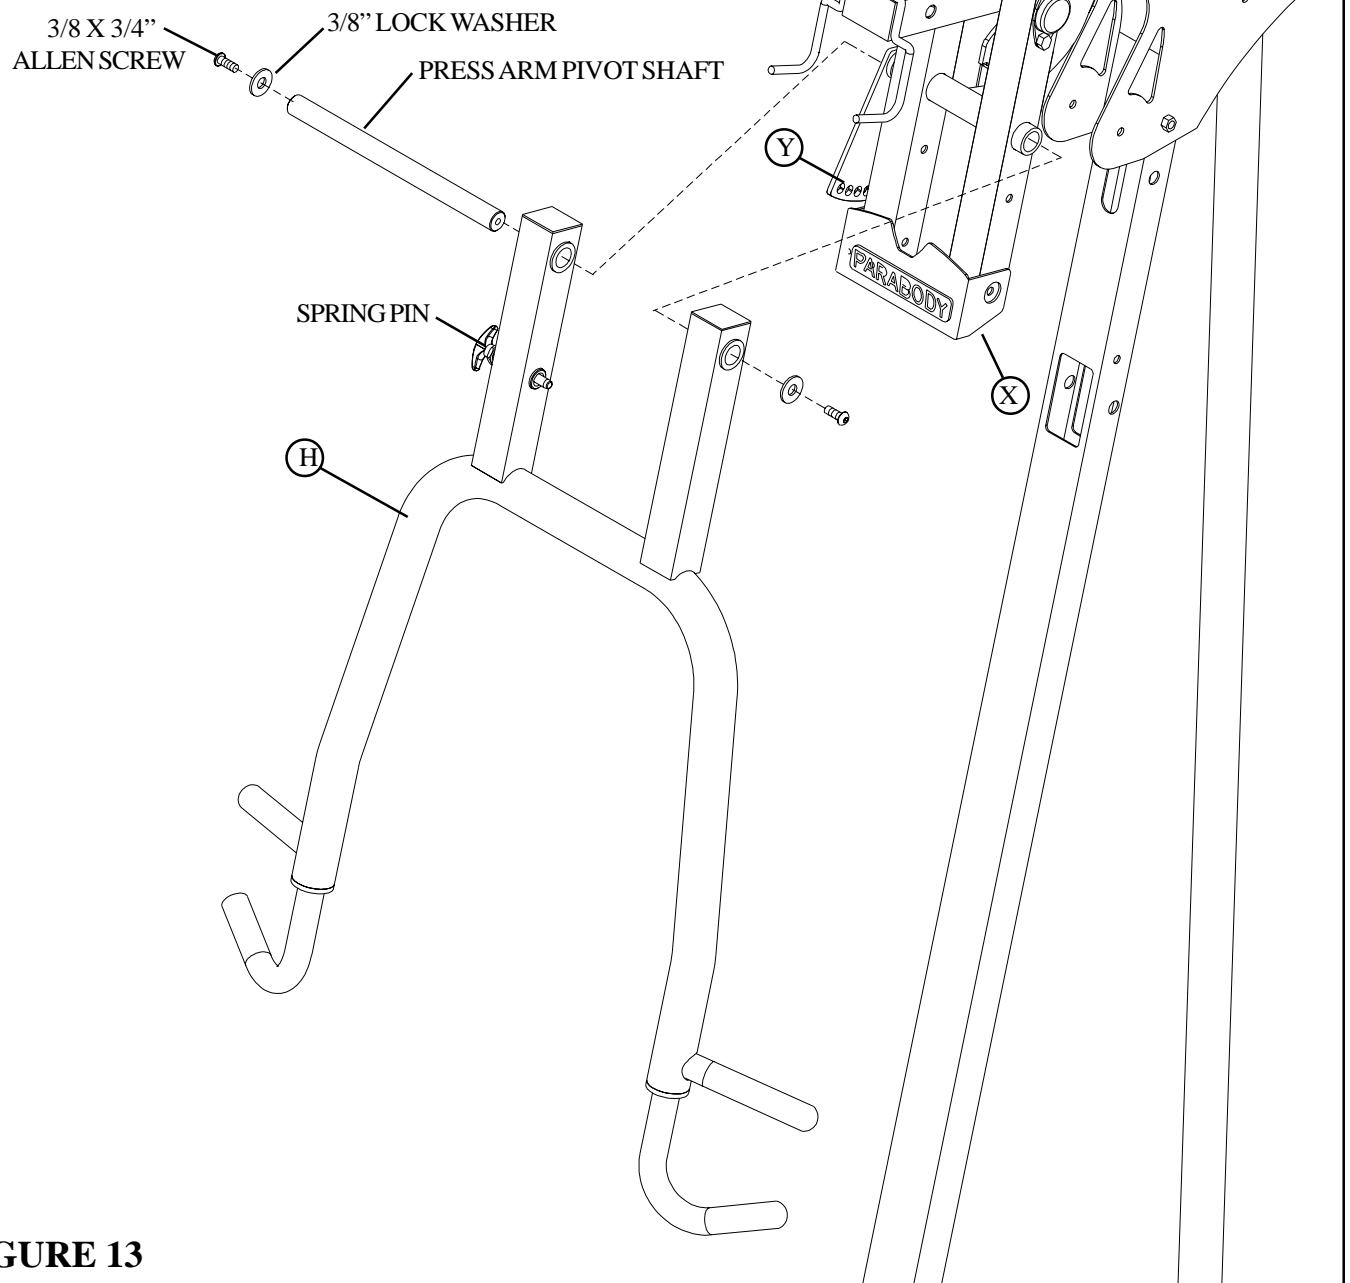


FIGURE 13

STEP 13:

- Disassemble the PRESS ARM PIVOT SHAFT from the PRESS ARM (H) by removing the two 3/8 X 3/4" ALLEN SCREWS and two 3/8" LOCK WASHERS as shown in FIGURE 13.
- Insert the PRESS ARM PIVOT SHAFT thru the PRESS ARM (H) and the PRESS ARM SUPPORT FRAME (X) and the resassemble the 3/8 X 3/4" ALLEN SCREWS and 3/8" LOCK WASHERS to the PRESS ARM PIVOT SHAFT as shown in FIGURE 13. (**Note: Tighten this connection enough to remove excess play yet allow the PRESS ARM to rotate freely.**)
- Pull back on the SPRING PIN and rotate the PRESS ARM (H) until the SPRING PIN connects with the ROM PLATE (Y)

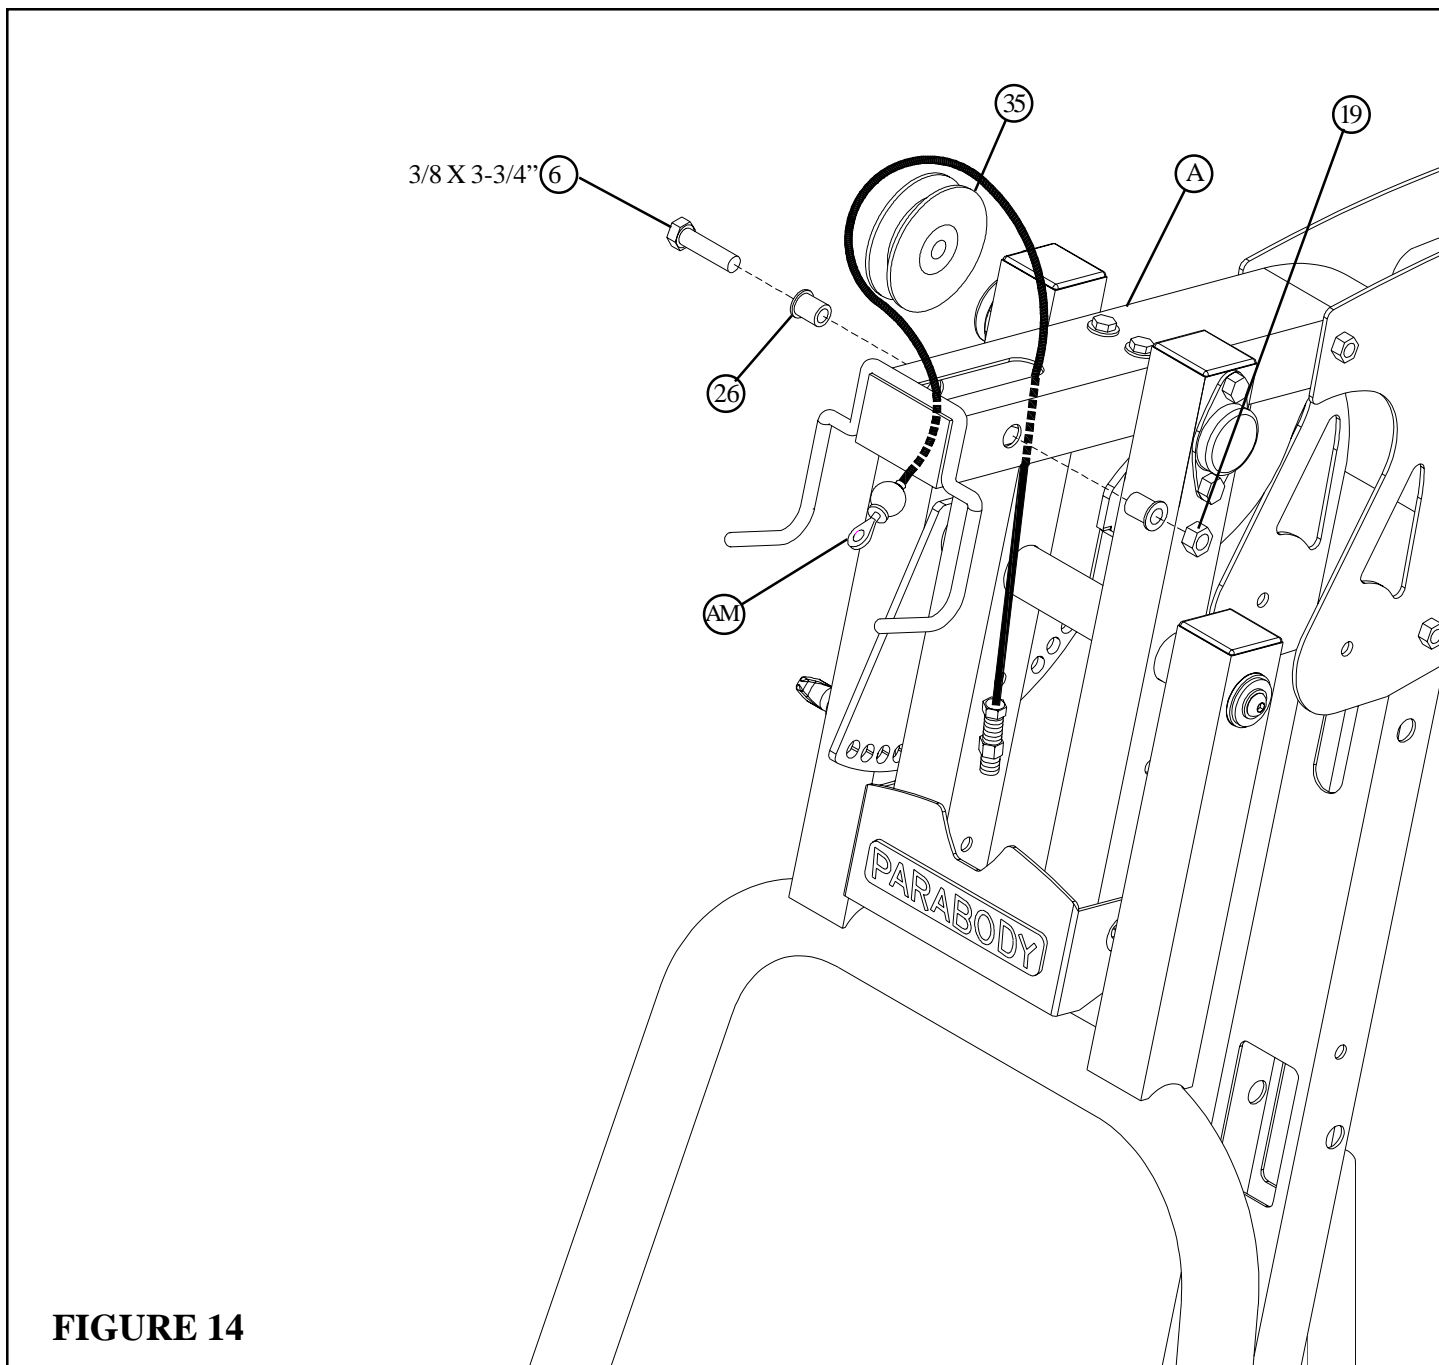
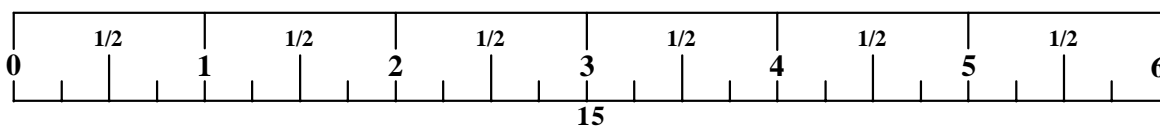


FIGURE 14

STEP 14:

- Route the LAT CABLE (AM) through the FRAME (A) and assemble one 3-1/2" PULLEY (35) to the FRAME (A) using one 3/8 X 3-3/4" BOLT (6), two 3/8 X 1-1/16" FLANGE SPACERS (26) and one 3/8" LOCK NUT (19). See FIGURE 14.
(NOTE: Make sure the cable runs in the grooves of the pulleys.)



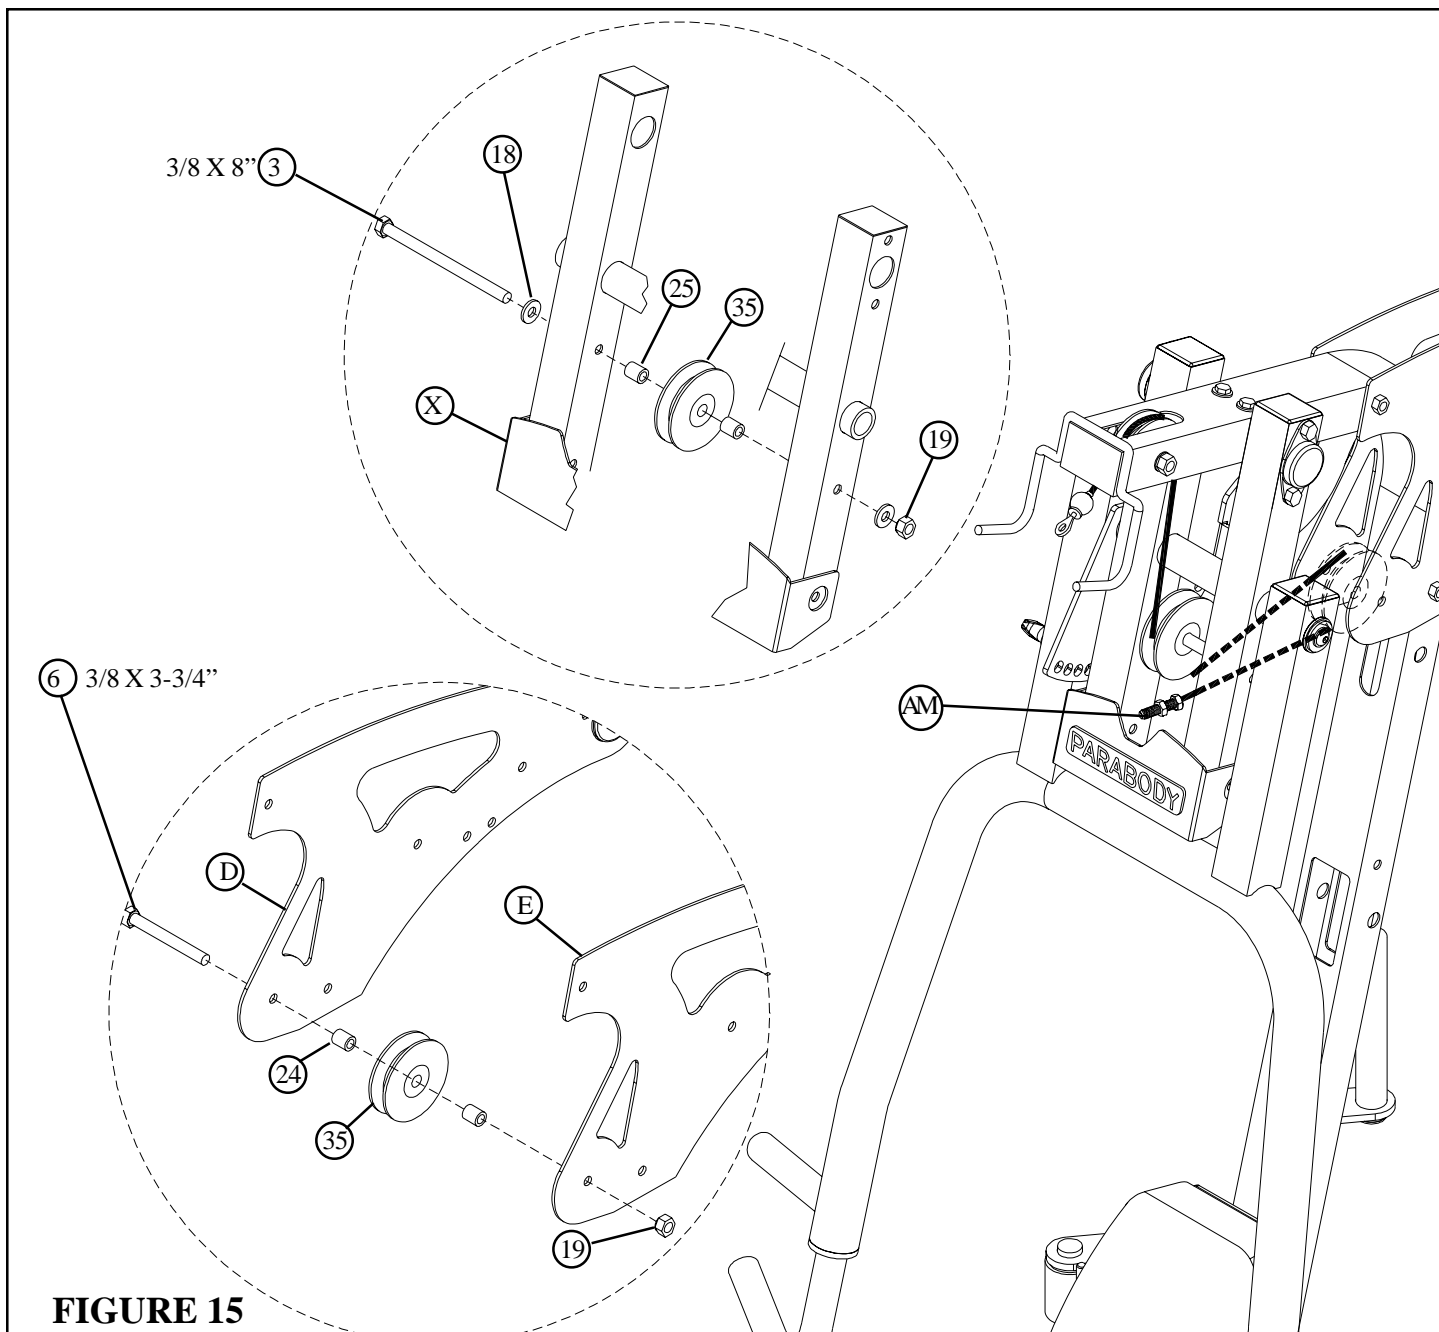


FIGURE 15

STEP 15:

- Route the LAT CABLE (AM) through the PRESS ARM SUPPORT FRAME (X) and assemble one 3-1/2" PULLEY (35) to the FRAME PRESS ARM SUPPORT FRAME (X) using one 3/8 X 8" BOLT (3), two 3/8" WASHERS (18), two 3/8 X 1-1/4" SPACERS (25) and one 3/8" LOCK NUT (19). See FIGURE 15.
- Route the LAT CABLE (AM) around one 3-1/2" PULLEY (35) and assemble the PULLEY to the LEFT (D) and RIGHT (E) BOOM PLATES using one 3/8 X 3-3/4" BOLT (6), two 3/8 X 15/16" SPACERS (24) and one 3/8" LOCK NUT (19). See FIGURE 15. **(NOTE: Make sure the cable runs in the grooves of the pulleys.)**

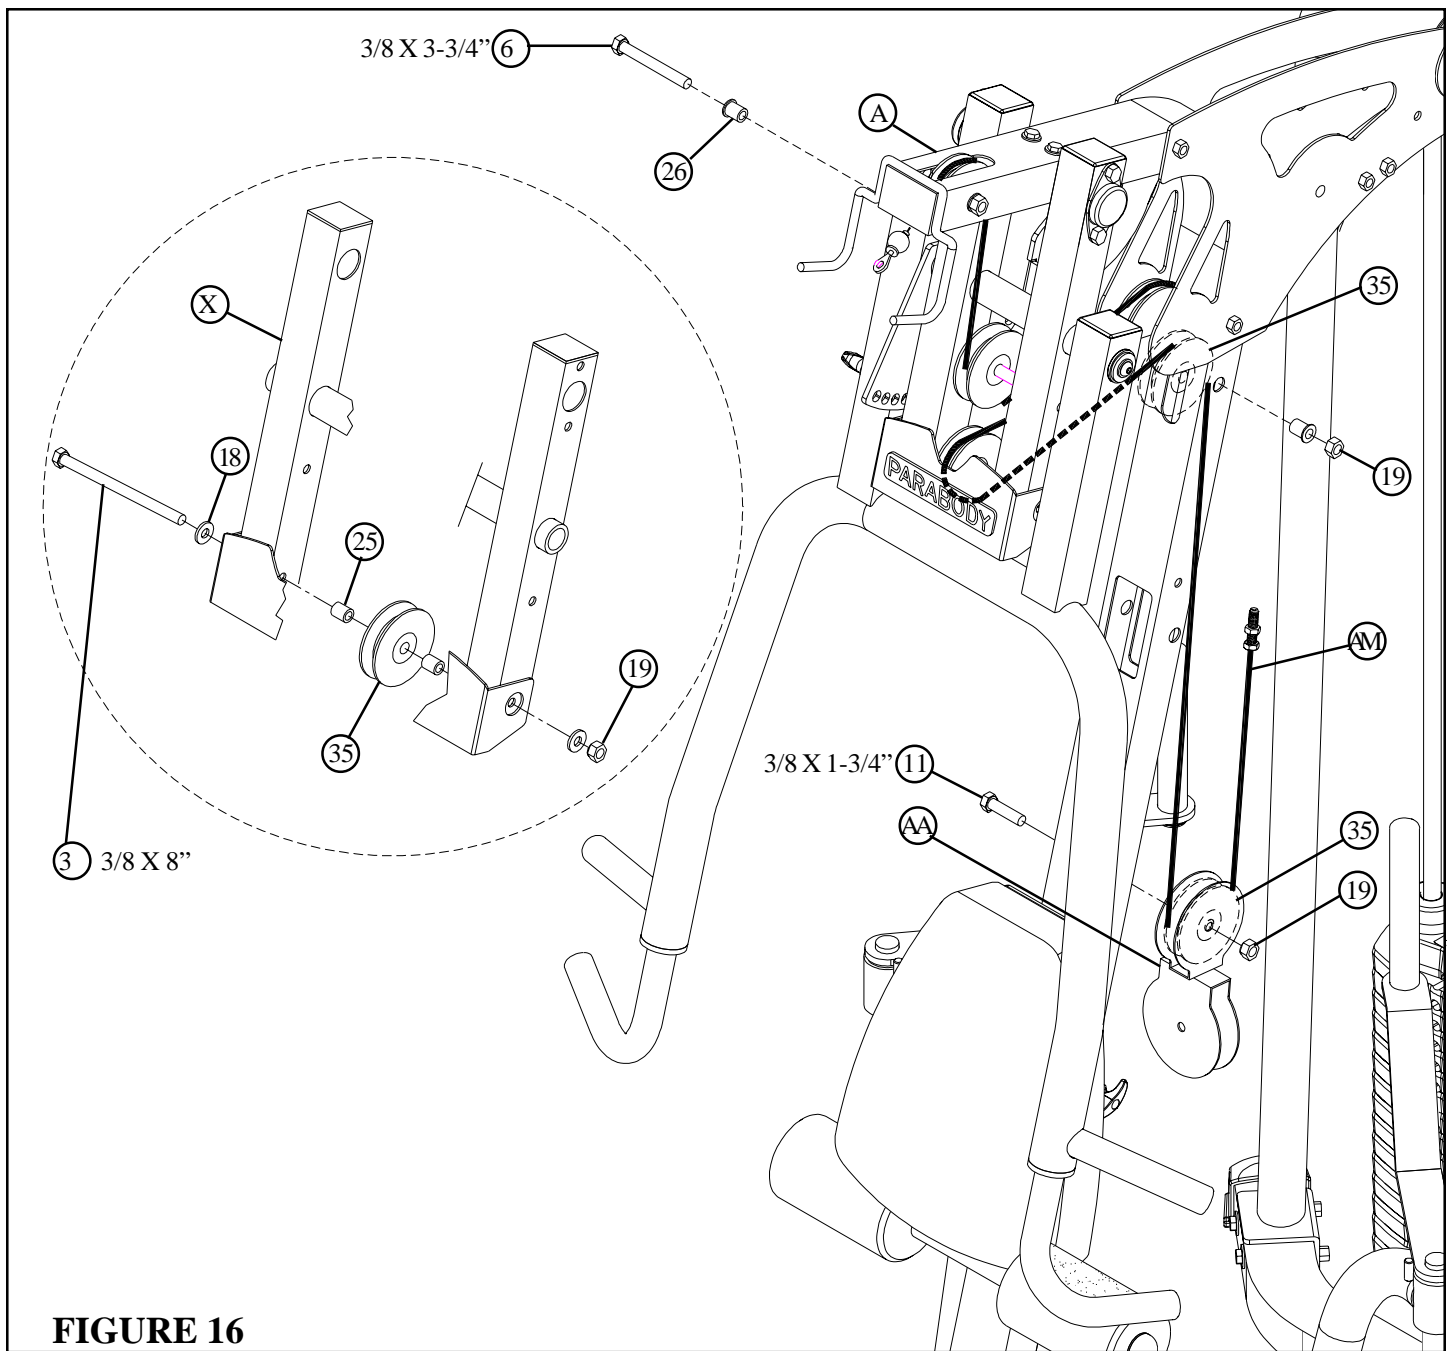
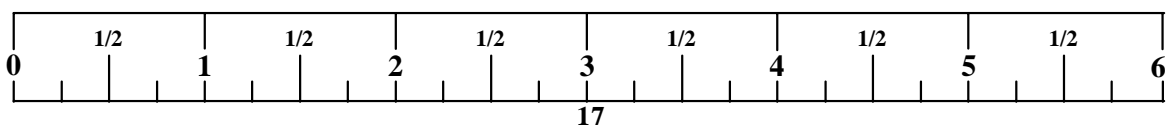


FIGURE 16

STEP 16:

- Route the LAT CABLE (AM) through the PRESS ARM SUPPORT FRAME (X) and assemble one 3-1/2" PULLEY (35) to the FRAME PRESS ARM SUPPORT FRAME (X) using one 3/8 X 8" BOLT (3), two 3/8" WASHERS (18), two 3/8 X 1-1/4" SPACERS (25) and one 3/8" LOCK NUT (19). See FIGURE 16.
- Route the LAT CABLE (AM) through the FRAME (A) and assemble one 3-1/2" PULLEY (35) to the FRAME (A) using one 3/8 X 3-3/4" BOLT (6), two 3/8 X 1-1/16" FLANGE SPACERS (26) and one 3/8" LOCK NUT (19). See FIGURE 16.
- Route the LAT CABLE (AM) around one 3-1/2" PULLEY (35) and assemble the PULLEY to the DOUBLE FLOATING PULLEY BRACKET (AA) using one 3/8 X 1-3/4" BOLT (11) and one 3/8" LOCK NUT (19). See FIGURE 16. **(NOTE: Make sure the cable runs in the grooves of the pulleys.)**




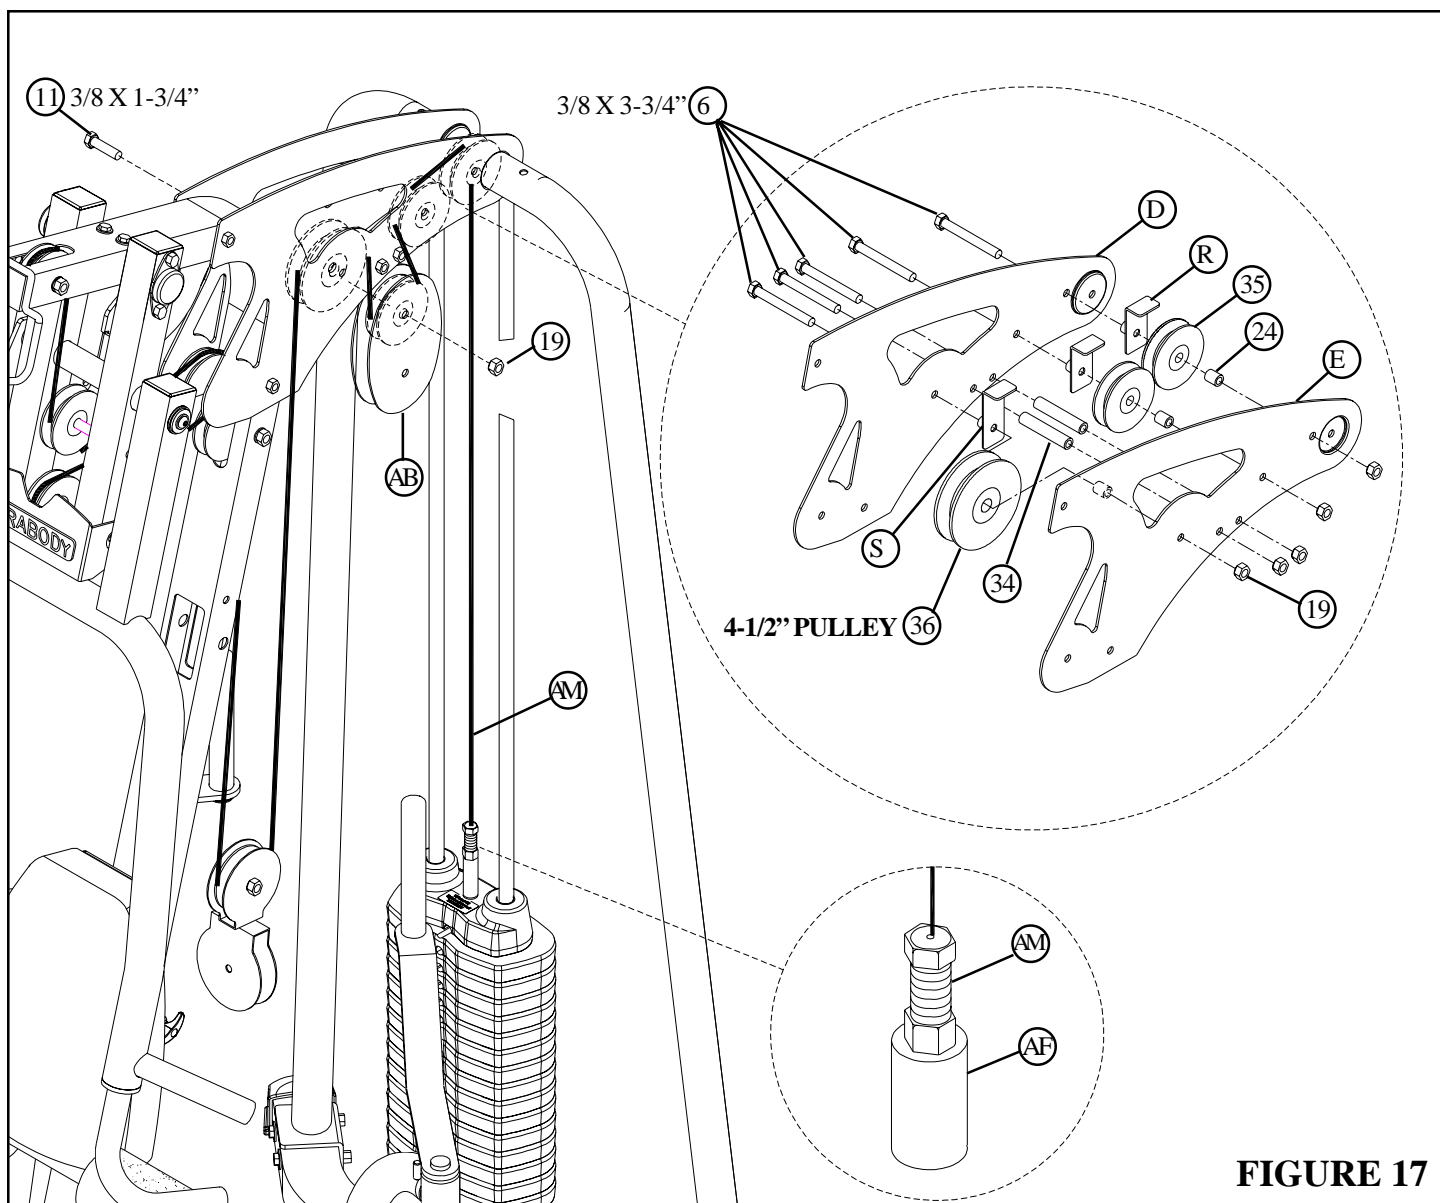


FIGURE 17


STEP 17:

- Route the LAT CABLE (AM) around one **4-1/2" PULLEY** (36) and assemble the PULLEY to the LEFT (D) and RIGHT (E) BOOM PLATES using one 3/8 X 3-3/4" BOLT (6), one LONG "L" CABLE BRACE (S), one 15/16" SPACER (24) and one 3/8" LOCK NUT (19). See FIGURE 17.
- **SECURELY** assemble two PLASTIC SLEEVES (34) to the LEFT (D) and RIGHT (E) BOOM PLATES using two 3/8 X 3-3/4" BOLTS (6) and two 3/8" LOCK NUTS (19) as shown in FIGURE 17.
- Route the LAT CABLE (AM) around one 3-1/2" PULLEY (35) and assemble two FLOATING PULLEY PLATES (AB) to the 3-1/2" PULLEY (35) using one 3/8 X 1-3/4" BOLT (11) and one 3/8" LOCK NUT (19). See FIGURE 17. (**NOTE: Make sure the cable runs in the grooves of the pulleys.**)
- Route the LAT CABLE (AM) over two 3-1/2" PULLEYS (35) and assemble the PULLEYS to the LEFT (D) and RIGHT (E) BOOM PLATES using two 3/8 X 3-3/4" BOLTS (6), two SHORT "L" CABLE BRACES (R), two 15/16" SPACERS (24) and two 3/8" LOCK NUTS (19). See FIGURE 17.
- Screw the threaded end of the LAT CABLE (AM) into the end of the HEAD PLATE ASSEMBLY (AF). See FIGURE 17.

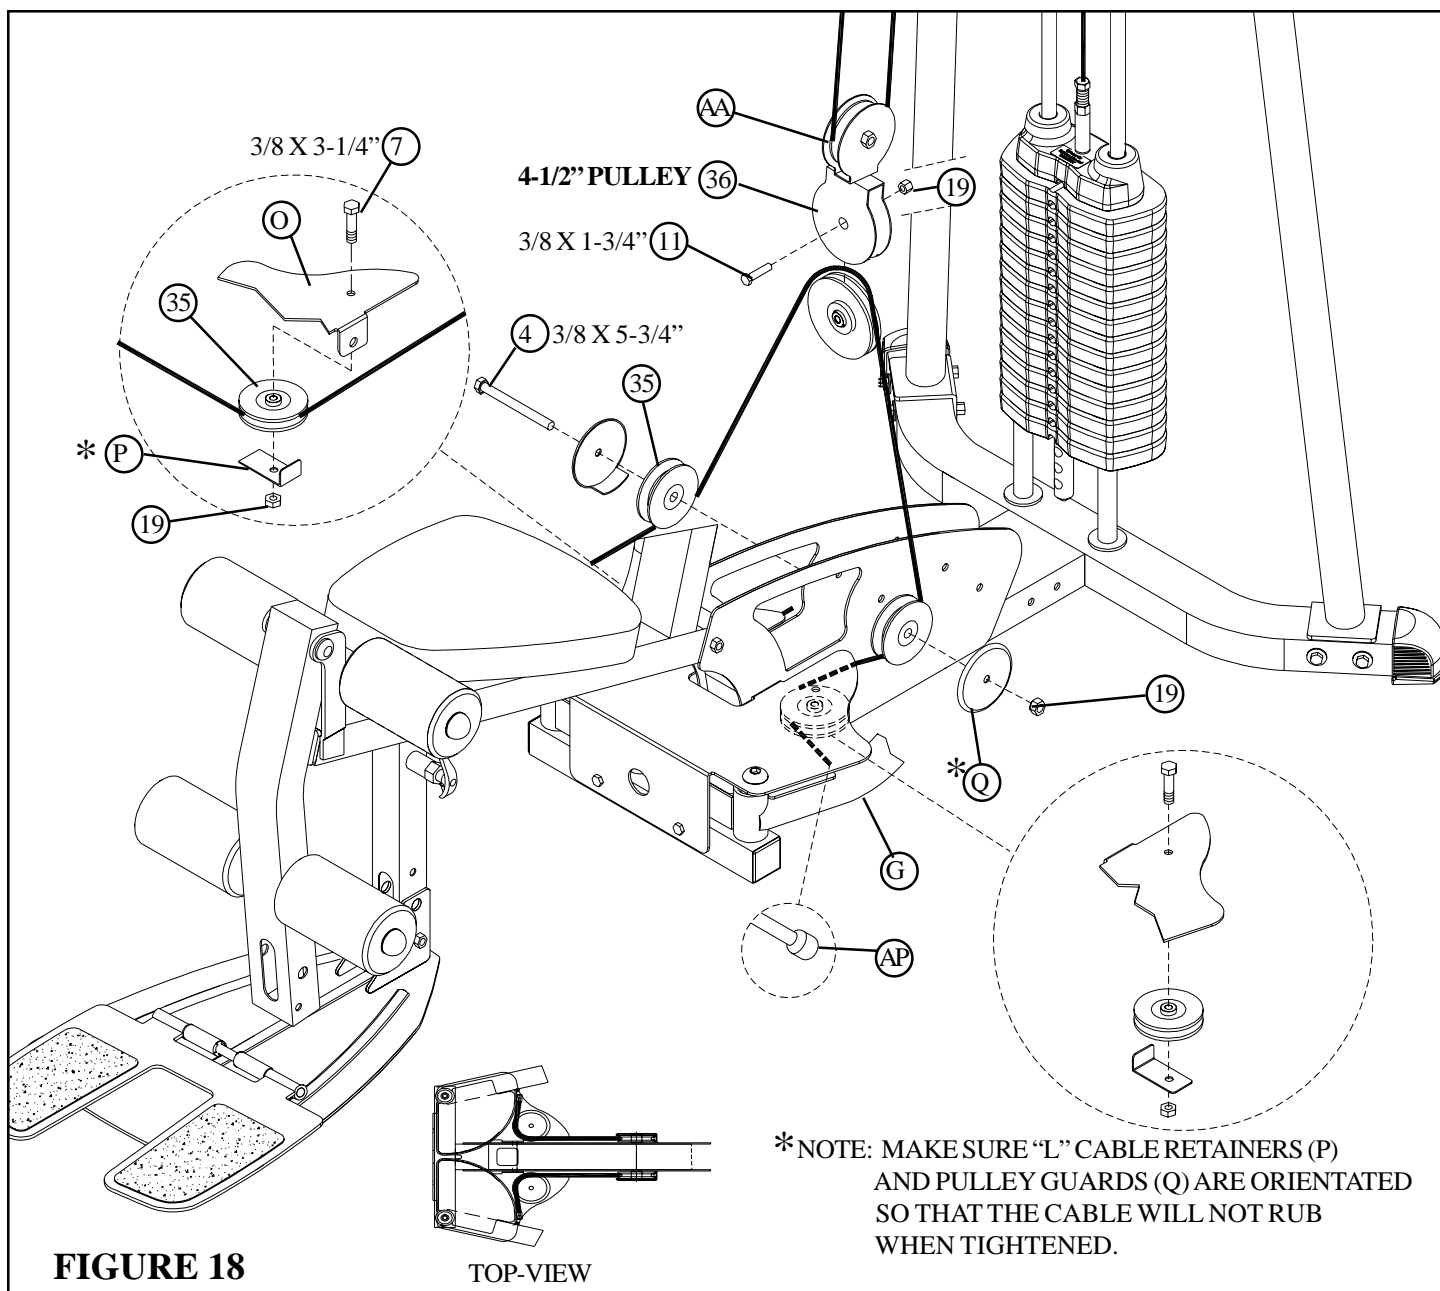

STEP 18:

- Securely assemble the PEC FLY CABLE (AP) to the RIGHT PEC ARM (6) as shown in FIGURE 18.
- Assemble one 3-1/2" PULLEY (35) to the PEC PLATE (O) using one 3/8 X 3-1/4" BOLT (7), one “L” CABLE RETAINER (P) and one 3/8" LOCK NUT (19). See FIGURE 18.(Note: Loop the PEC FLY CABLE (43) around the PULLEY prior to assembling the PULLEY to the PEC PLATE.)
- Assemble two 3-1/2" PULLEYS (35) to the BASE PLATES (C) using one 3/8 X 5-3/4" BOLT (4), two PULLEY GUARD (Q) and one 3/8" LOCK NUT (19). See FIGURE 18.(Note: Loop the PEC FLY CABLE (AP) around the PULLEY prior to assembling the PULLEY to the PEC PLATE.)
- Route the PEC FLY CABLE (AP) around one 4-1/2" PULLEY (36) and assemble the 4-1/2" PULLEY (36) to the DOUBLE FLOATING PULLEY BRACKET (AA) using one 3/8 X 1-3/4" BOLT (11) and one 3/8" LOCK NUT (19). See FIGURE 18.
- Assemble one 3-1/2" PULLEY (35) to the PEC PLATE (O) using one 3/8 X 3-1/4" BOLT (7), one “L” CABLE RETAINER (P) and one 3/8" LOCK NUT (19). See FIGURE 18.(Note: Loop the PEC FLY CABLE (AP) around the PULLEY prior to assembling the PULLEY to the PEC PLATE.)
- Securely assemble the PEC FLY CABLE (AP) to the LEFT PEC ARM (G) as shown in FIGURE 18.

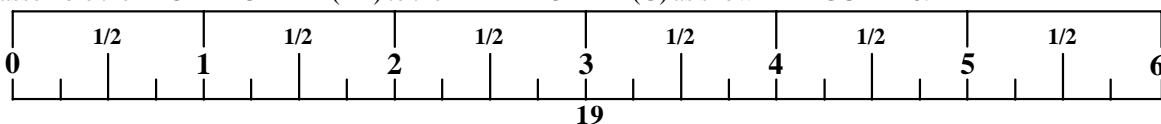

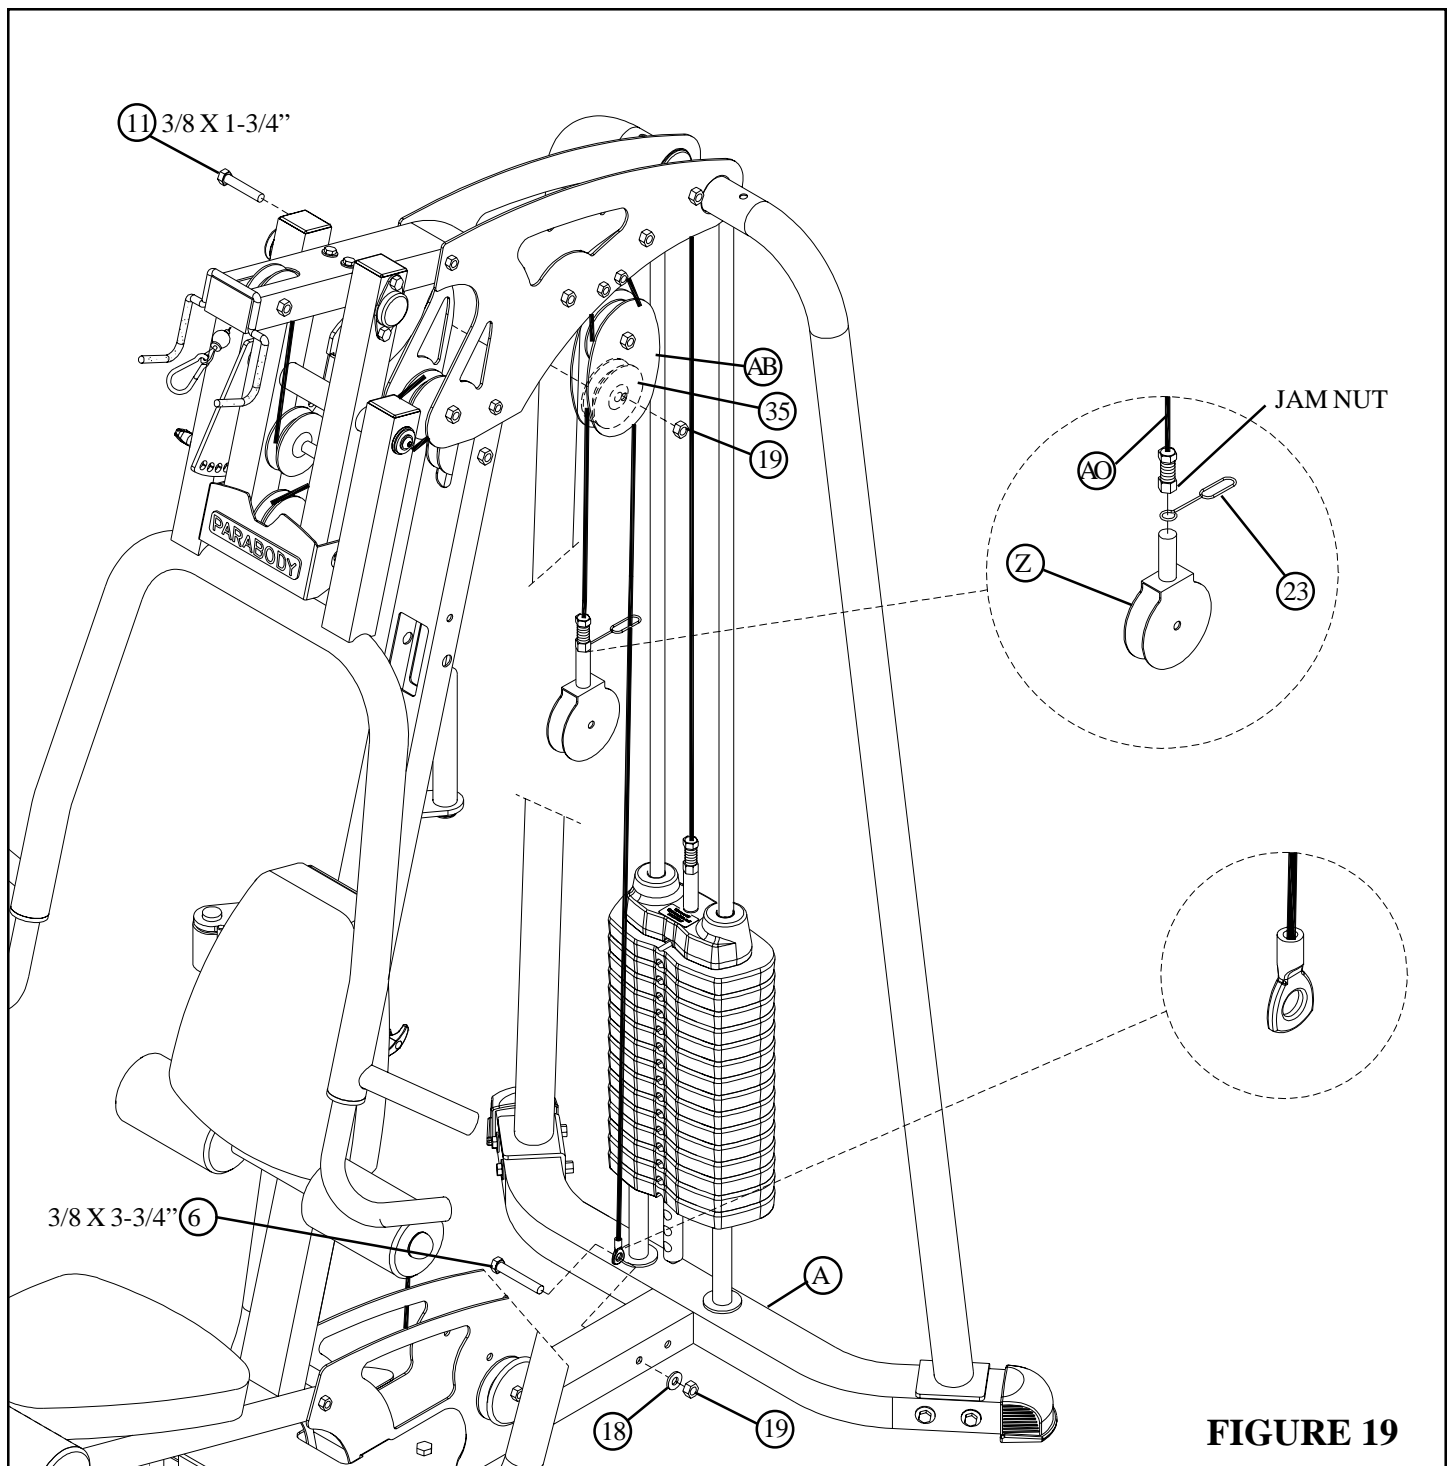


FIGURE 19

STEP 19:

- Screw the threaded end of the GUIDE CABLE (AO) into the end of the FLOATING PULLEY BRACKET (Z). Secure the CABLE GUIDE (23) in place with the JAM NUT on the GUIDE CABLE. See FIGURE 19.
- Route the GUIDE CABLE (AO) around one 3-1/2" PULLEY (35) and assemble the PULLEY to the FLOATING PULLEY PLATES (AB) using one 3/8 X 1-3/4" BOLT (11) and one 3/8" LOCK NUT (19). See FIGURE 19. (**NOTE: Make sure the cable runs in the grooves of the pulleys.**)
- Route the hook end of the GUIDE CABLE (AO) thru the CABLE GUIDE (23) then **SECURELY** assemble the hook end of the GUIDE CABLE (AO) to the BASE using one 3/8 X 3-3/4" BOLT (6), one 3/8" WASHER (18) and one 3/8" LOCK NUT (19) as shown in FIGURE 19.


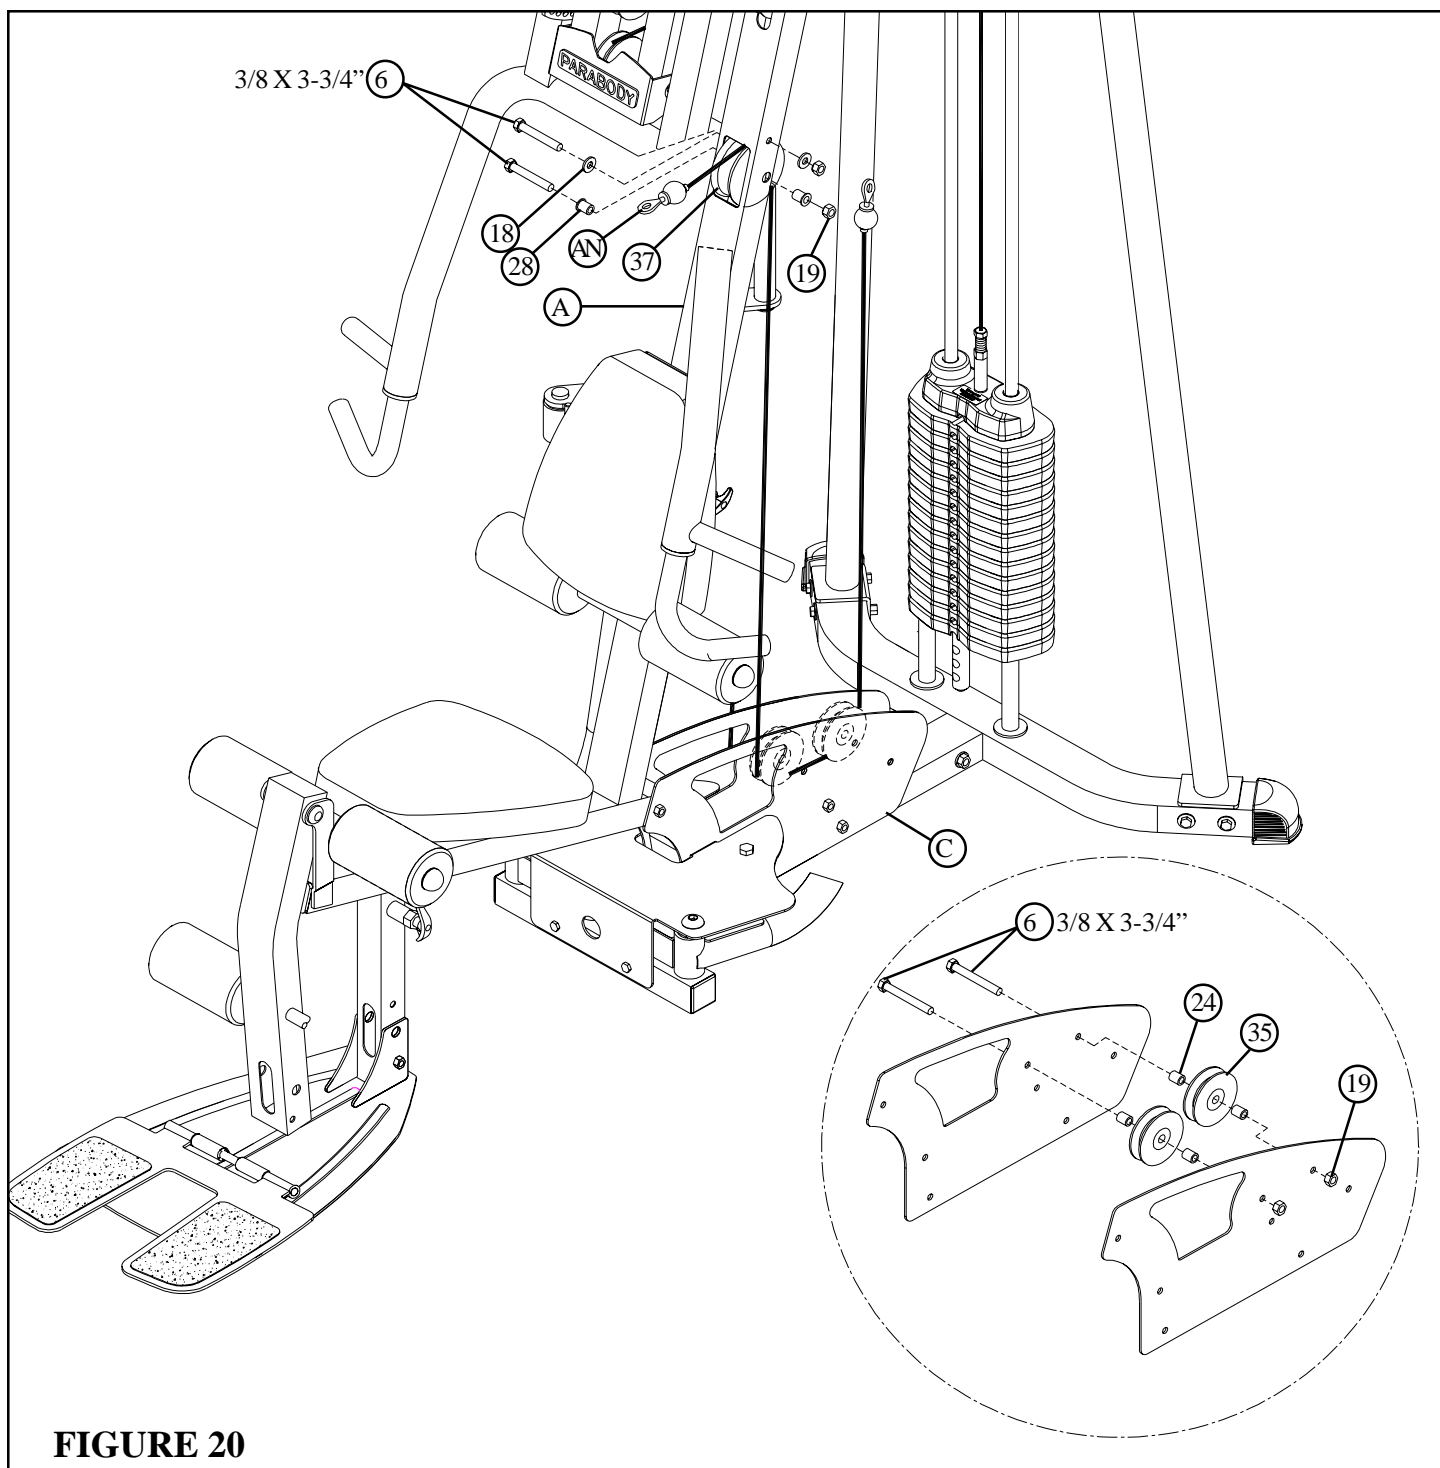


FIGURE 20

STEP 20:

- Route the large ball end of the LOW CABLE (AN) around one V- PULLEY (37) and assemble the PULLEY to the FRAME (A) using two 3/8 X 3-3/4" BOLTS (6), two 19/32" FLANGE SPACERS (28), two 3/8" WASHERS (18) and two 3/8" LOCK NUTS (19) as shown in FIGURE 20.
- Route the small ball end of the LOW CABLE (AN) through the BASE PLATES (C) and assemble two 3-1/2" PULLEYS (35) to the BASE PLATES (C) using two 3/8 X 3-3/4" BOLTS (6), four 15/16" SPACERS (24) and two 3/8" LOCK NUTS (19). See FIGURE 20.


FIGURE 21

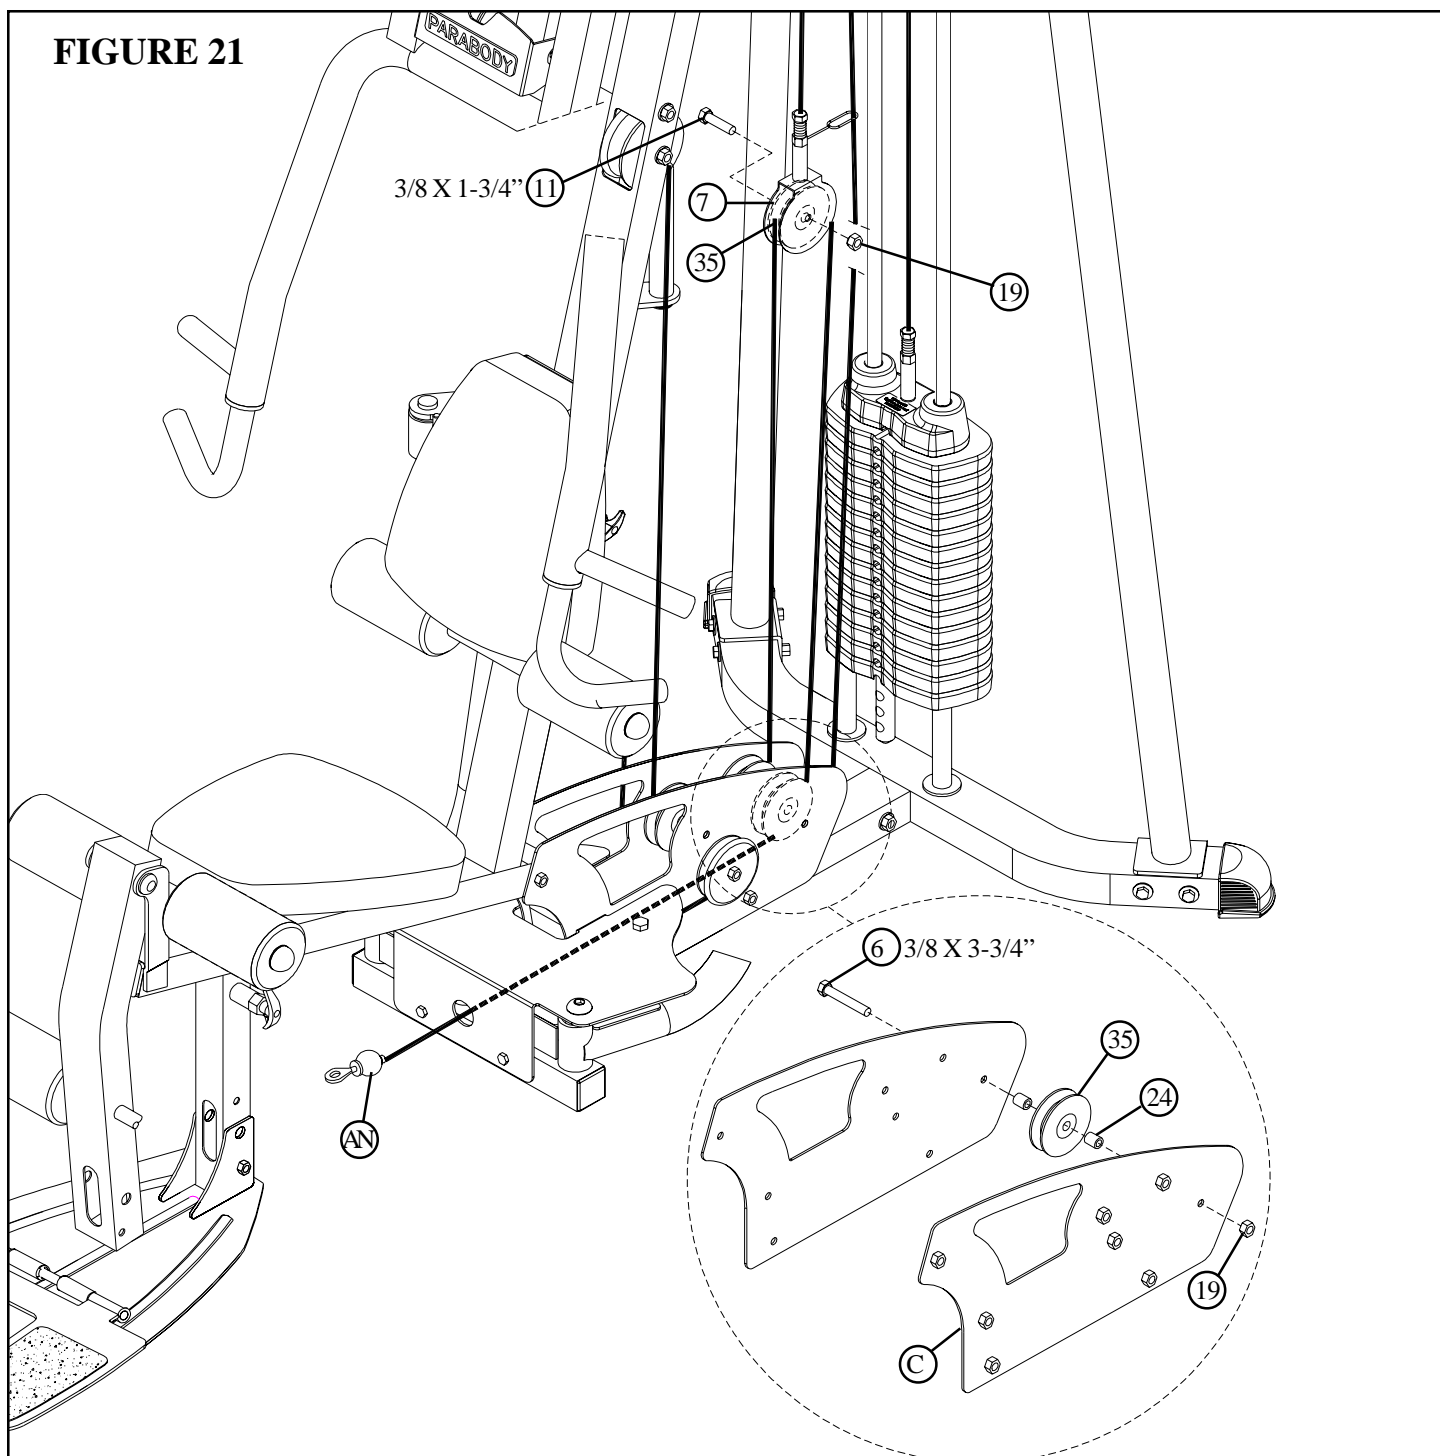

STEP 21:

- Route the LOW CABLE (AN) around one 3-1/2" PULLEY (35) and assemble the PULLEY to the PULLEY BRACKET (Z) using one 3/8 X 1-3/4" BOLT (11) and one 3/8" LOCK NUT (19) as shown in FIGURE 21.
- Route the LOW CABLE (AN) through the BASE PLATES (C) and assemble one 3-1/2" PULLEY (35) to the BASE PLATES (C) using one 3/8 X 3-3/4" BOLT (6), two 15/16" SPACERS (24) and one 3/8" LOCK NUT (19). See FIGURE 21.

FIGURE 22

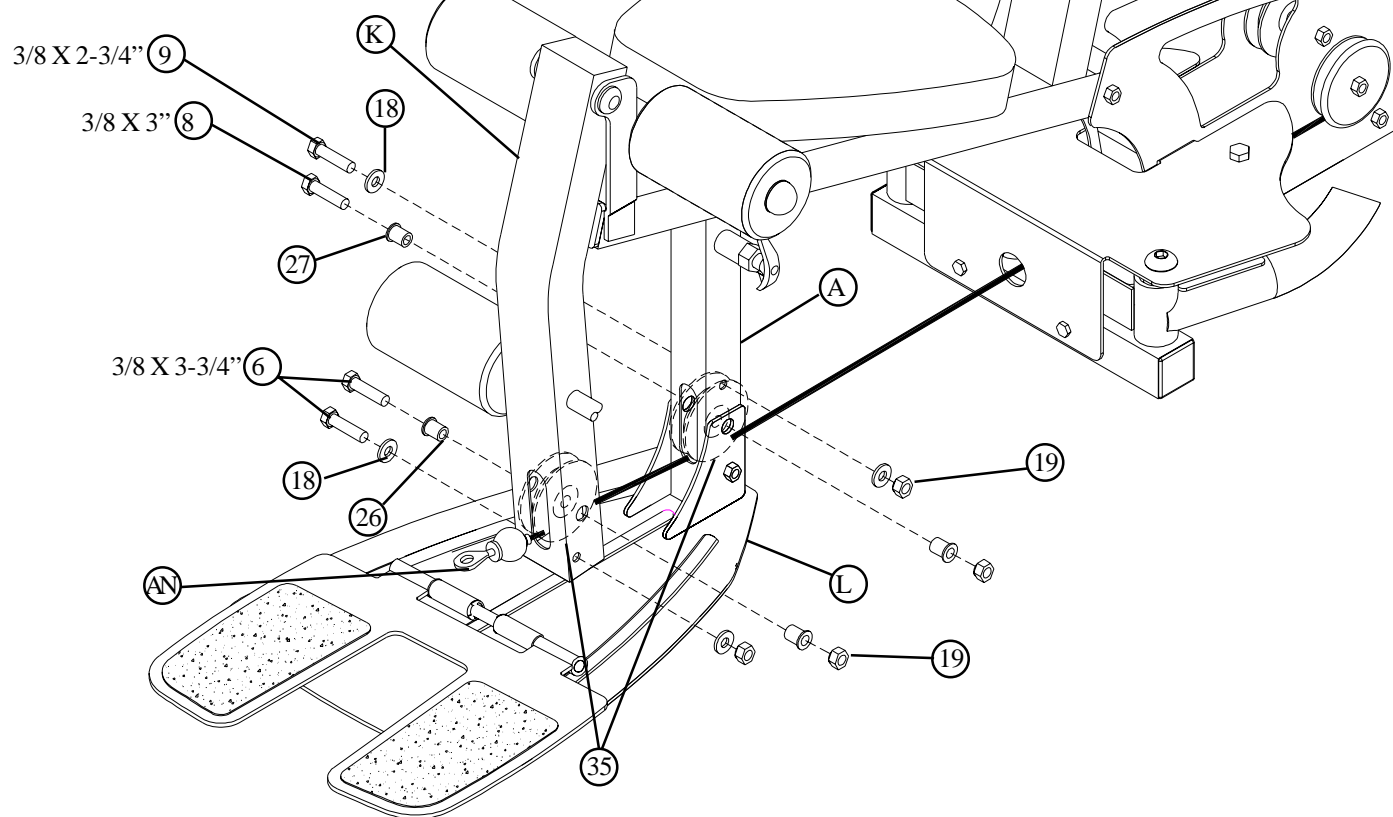

STEP 22:

- Assemble one 3-1/2" PULLEY (35) to the FOOT PLATE (L) using one 3/8 X 3" BOLT (8), two STEP SPACERS 25/32" (27) and one 3/8" LOCK NUT (19). See FIGURE 22.
- Assemble one 3/8 X 2-3/4" BOLT (9) to the FRAME (A) using two 3/8" WASHERS (18) and one 3/8" LOCK NUT (19). See FIGURE 22. (NOTE: The LOW CABLE (AN) should be routed under the retaining bolt as shown in FIGURE 22.)
- Route the small ball end of the LOW CABLE (AN) around one 3-1/2" PULLEY (35) and assemble the PULLEY to the LEG PEDESTAL (K) using two 3/8 X 3-3/4" BOLTS (6), two STEP SPACERS 1-1/16" (26), two 3/8" WASHERS (18) and two 3/8" LOCK NUTS (19) as shown in FIGURE 22. (NOTE: The LOW CABLE (AN) should be routed over the retaining bolt as shown in FIGURE 22.)



TROUBLE SHOOTING

- If the cable lengths seem incorrect, check that the two 4-1/2" PULLEYS (36) are in the correct locations as shown above
- If the cables seem to be rubbing or are making noise, make sure that all the "L" CABLE RETAINERS and PULLEY GUARDS are orientated correctly.

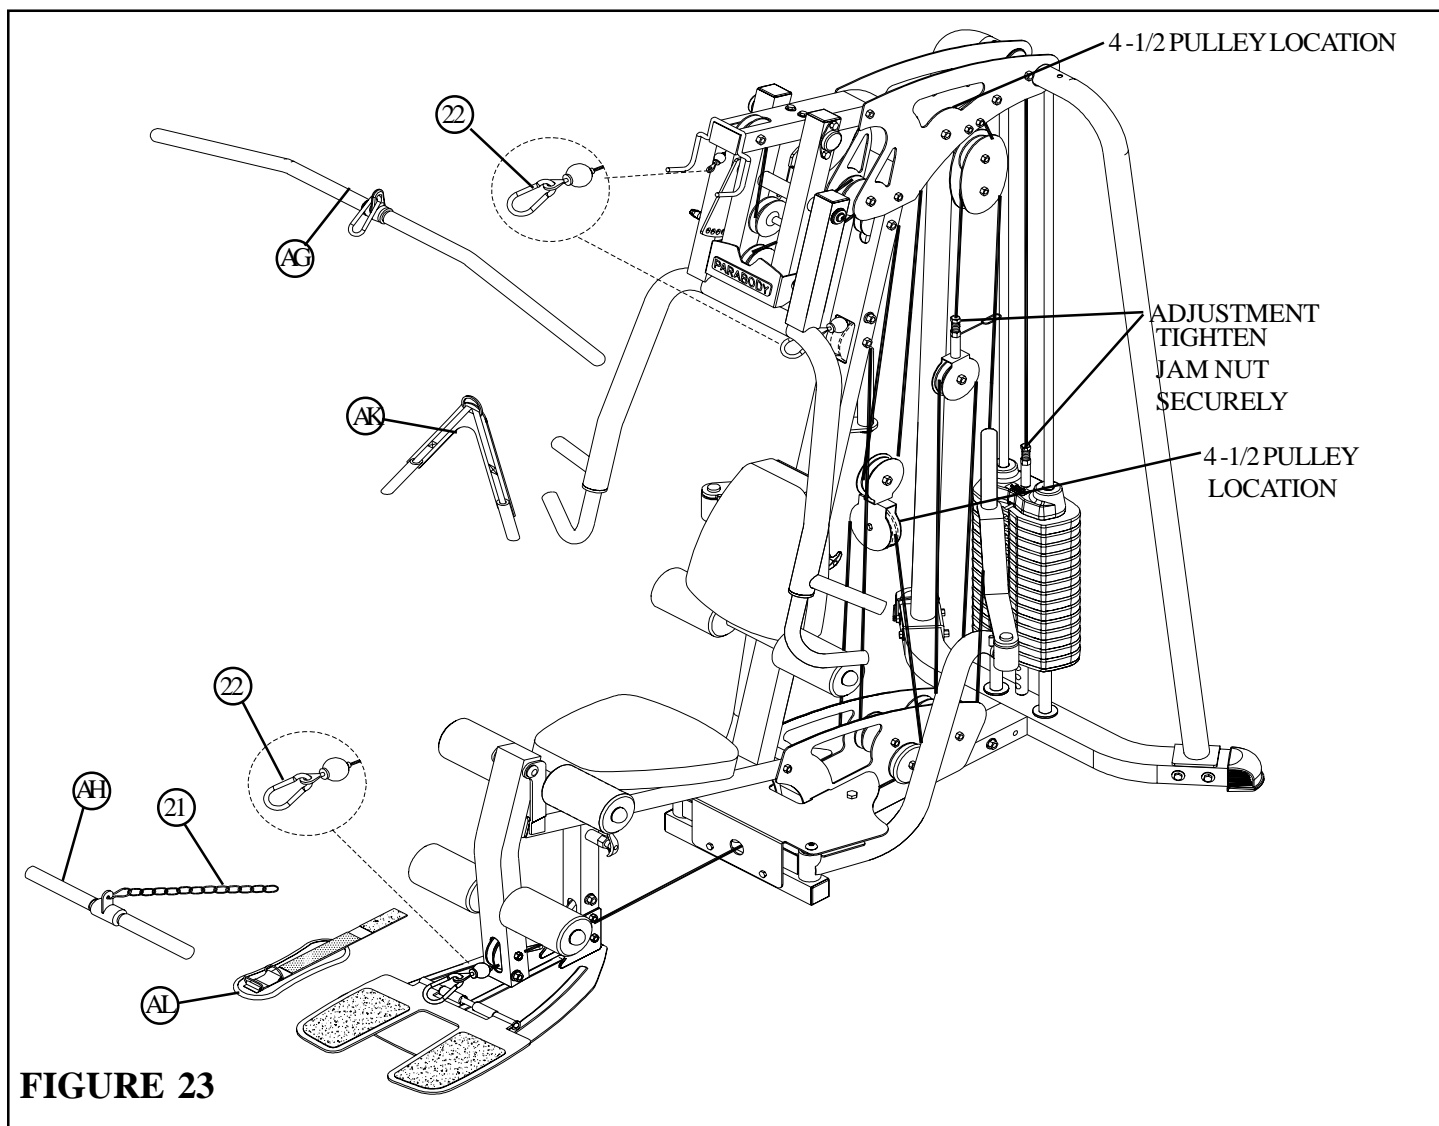


FIGURE 23

STEP 23:

- If upon completion of assembly, the HEAD PLATE (AF) does not sit on top of the first WEIGHT PLATE, push the HEAD PLATE (AF) down, insert the WEIGHT SELECTOR PIN and perform several repetitions at the press station. This will relax the cable system and prevent the HEAD PLATE (AF) from lifting up. See FIGURE 23.
- If after completing previous step, the HEAD PLATE (AF) still does not sit on top of the first WEIGHT PLATE or if there is excess slack in the cable system, adjust the threaded end of the LAT CABLE (AM) and ADJUSTABLE GLIDE accordingly and retighten the jam nuts. See figure 23.
- For maximum performance, the HEAD PLATE (AF) should just barely sit on the top WEIGHT PLATE
- Attach the LAT BAR (AG) to the ball end of LAT CABLE (AM) using one SNAP LINK (22) as shown in FIGURE 23.
- Attach the ANKLE STRAP (AL) to the 12 LINK CHAIN (21) using one SNAP LINK (22) as shown in FIGURE 23
- Attach the AB STRAP (AK) to the ball end of LOW CABLE (AN) using one SNAP LINK (22) as shown in FIGURE 23.

Thank you for purchasing the ParaBody GS4 Gym System. If unsure of proper use of equipment, call your local ParaBody distributor or call the ParaBody customer service department at (800) 328-9714

MAINTENANCE

Please note:

- * We recommend cleaning your product (pads and frame) on a regular basis, using warm soapy water. Touch-up paint can be purchased from your ParaBody customer service representative at (800) 328-9714.
- * Inspect equipment daily. Tighten all loose connections and replace worn parts immediately. Failure to do so may result in serious injury.
- * Lubricate guide rods with a teflon based (or equivalent) lubricant on a regular basis.
- * **PLEASE RECORD THE INFORMATION REQUESTED BELOW. IN THE EVENT YOU MAY NEED SERVICE YOU WILL BE ASKED FOR THIS INFORMATION. REMEMBER TO FILL OUT YOUR WARRANTY REGISTRATION CARD AND MAIL BACK.**


MODEL # _____

SERIAL # _____

DATE OF PURCHASE: _____

DEALERS NAME: _____

DEALERS PHONE # _____

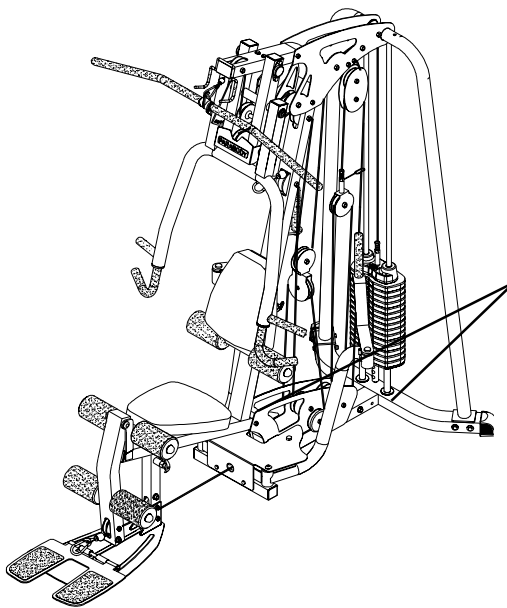

SERIAL NUMBER LOCATION
ON BACK OF BASE AND ON
FRONT UPRIGHT

Thank you for purchasing the ParaBody GS4Gym System.

LIMITED WARRANTY

ParaBody extends the following LIMITED WARRANTY to the original owner of the ParaBody products. The Warranty terms apply to IN HOME USE ONLY.

1. **LIMITED WARRANTY ON FRAME AND WELDS.** If the frame of the ParaBody product or a weld should crack or break, it will be repaired or replaced by ParaBody. Terms: Lifetime – for so long as the Customer owns the ParaBody product.
2. **LIMITED WARRANTY ON PARTS.** If the following parts are defective in material or workmanship, ParaBody will supply replacement parts: all bolts, nuts, washers, bearings, bushings, pulleys, thumbscrews, collars, cable retaining clips, adjustable pre-stretch slides, roller pad shafts, allen head bolts, weight selector pin, weight stack shaft, set screws, protector caps, adjustment chain, cotter pin, plunger, spring and knob. Terms: Lifetime – for so long as the Customer owns the ParaBody product.
3. **LIMITED WARRANTY ON CABLES AND UPHOLSTERY.** If the coated cables or upholstery are defective in material or workmanship, ParaBody will repair or replace them, at its option. Terms: Three (3) years.
4. **CONDITIONS AND EXCEPTIONS.** Any product misuse, abuse or alteration, any attempt to repair by a person other than an authorized ParaBody Service Center, any improper assembly, accident, or any other condition resulting from occurrences beyond the control of ParaBody will void this Limited Warranty.
5. **REPLACEMENT AND REPAIR EXPENSES.** ParaBody will provide only replacement parts or repair under this warranty. The Owner is responsible for all other costs. Such costs may include, but are not limited to: a. labor charges for service, removal, repair or reinstallation of the ParaBody product or any component part; b. shipping, delivery, handling and administrative charges for returning parts to ParaBody; and c. all necessary or incidental costs related to installation of the replacement parts.
6. **SHIPPING.** If shipping by the Owners is deemed necessary (in sole discretion of ParaBody), parts should be shipped in their original carton or equivalent packaging, fully insured with shipping charges prepaid. ParaBody will not assume any responsibility for any loss or damage incurred in shipping.
7. **CLAIM PROCEDURES.** If service on your ParaBody product is required during the warranty period, please contact our Customer Service Department at 1-800-328-9714 for instructions regarding returning or replacing parts. Please have available the following information: (i) the dealer's name; (ii) the date of purchase; (iii) the serial # (s) of your product (the serial number location is called out on the final assembly drawing included with your assembly instruction); (iv) a description of the nature of the problem.
8. **OWNER'S RIGHT.** This Limited Warranty gives you specific legal rights. You may also have other rights, which vary depending on local law.
9. **LIMITATION OF IMPLIED WARRANTIES.** All implied warranties, except to the extent prohibited by applicable law, shall have no greater duration than the warranty period set forth above. There are no warranties which extend beyond the description in this Limited Warranty. Because local laws do not allow limitations on how long an implied warranty lasts, the above limitations may not apply to you.
10. **DISCLAIMER.** No other express warranty has been made or will be made on behalf of ParaBody with respect to any ParaBody product or the operation, repair or replacement of any ParaBody product. ParaBody shall not be responsible for injury, loss of use of the ParaBody product, inconvenience, loss or damage to personal property, whether direct or indirect, and incidental or consequential damages, so the above limitation or exclusion may not apply to you.

NOTES:

LIFE FITNESS CONSUMER DIVISION

14150 Sunfish Lake Blvd. Ramsey Minnesota, 55303 U.S.A.

Tel: 763.323.4500 Fax: 763.323.4797

800.328.9714 (Toll-free within the U.S. and Canada)

www.parabody.com

INTERNATIONAL OFFICES

Life Fitness Atlantic BV
Atlantic Headquarters
Bijdorpplein 25-31
2992 LB Barendrecht
The Netherlands
Phone: (180) 646 666
Fax: (180) 646 703

Life Fitness EUROPE GmbH
Siemensstrasse 3
85716 Unterschleissheim
Germany
Phone: (089) 31 77 51-0
Fax: (089) 31 77 51 99

Life Fitness Italia S.R.L.
Via Elvas 92
39042 Bressanone
Italy
Phone: 39 (472) 835-470
Fax: 39 (472) 833-150

Life Fitness Asia Pacific Limited
Room 2610, Miramar Tower
132 Nathan Road, Tsimshatsui
Kowloon, Hong Kong
Phone: (852) 2891-6677
Fax: (852) 2575-6001

Life Fitness (UK) Ltd.
Queen Adelaide
Ely, Cambs CB7 4UB
United Kingdom
Phone CSS: (01353) 665507
Fax CSS: (01353) 666719

Life Fitness Benelux N.V.
Bijdorpplein 25-31
2992 LB Barendrecht
The Netherlands
Phone: 31 (180) 64 66 69
Fax: 31 (180) 64 66 99

Life Fitness Japan
8/F, Nippon Brunswick Building
5-27-7 Sendagaya
Shibuya-Ku, Tokyo 151-0051
Japan
Phone: 81 (3) 3359-4309
Fax: 81 (3) 3359-4307

Life Fitness Do Brazil
Al. Rio Negro, 433-Predio 2-Sala 2
3º andar (Confab)
Aplhaviille-Barueri-Sao Paulo
CEP: 06454-904
Brazil
Phone: 55 (11)7295-2217
Fax: 55 (11) 7295-2218